

E L i T E

ENTERTAINMENT

 
R V DVD Receiver System EEDV01

(Instruction Manual)

BEFORE USING PLEASE READ THIS MANUAL CAREFULLY

Contents

Safety Guidelines	
Important safety instructions	
Safety compliance	
Warnings	
Warranty Information	
At a glance	2
Features	2
Radio Operation	3
DVD/CD/MP3/MP4 Operation	4
Bluetooth® Syncing	6
Placing a Call	10
Placing a Call - Remote	13
Remote Control Guide	16
System Setup	17
Lanugage	18
Audio	19
Video	23
Digital	24
Wiring Diagram	24
Troubleshooting	25
Quick Start Guide	25
Specifications	26
	27
	28
	30



WARNING -To reduce the risk of electrical shock, do not remove cover (or open unit). **NO USER SERVICEABLE** parts are inside. Refer servicing to **QUALIFIED SERVICE PERSONNEL**.

The design and manufacture of this player takes personal safety into consideration. However, any improper operation may result in electric shock, fire, or other hazard.

DO NOT open the cabinet by yourself to prevent electric shock. Please contact a professional technician to perform any service needed. Please use only components recommended by factory when replacement is necessary.

Please turn unit off when not in use. Use a dry, soft cloth to clean face with the system turned off.

 
PRECAUTION - Moisture may cause the lens on loader in this unit to malfunction. To remedy the problem, turn unit on, eject disc and run 1-2 hours to vaporize moisture inside the unit. Do not repeatedly turn unit off and on. After turning unit off wait 10 seconds before turning on again. Do not use broken, scratched, or twisted discs in player. This could result in damage to the unit.

Use only 5", 12cm discs in this unit.

ONE (1) YEAR LIMITED WARRANTY
The Manufacture warrants to the original unit that is or any part therein, under no be proven defective in material or work from the date of original purchase, such or replaced at the manufactures option and repair labor.

This warranty does not extend to the generated static or noise, to the corrected noise or to the cost incurred to warranty does not cover the removal or the or damage to any CD's. Speakers, acc electrical system.

This warranty does not the cabinet app the unit or any part of the unit which, in manufacture, has been damaged throu installation, mishandling, misuse, negl EXTENT OF THE MANUFACTURE'S L WARRANTY IS LIMITED TO THE REP, PROVIDED ABOVE, AND IN NO EVEN FACTURES LIABILITY EXCEED THE I BY THE ORIGINAL BUYER FOR THE I

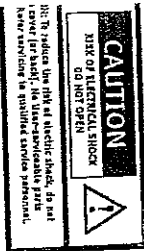

the risk of electrical shock, do not
unit). NO USER SERVICEABLE parts are
o QUALIFIED SERVICE PERSONNEL.

icture of this player takes personal safety
ever, any improper operation may result
other hazard.

net by yourself to prevent electric shock.
sional technician to perform any service
ly components recommended by factory
ccessary.

in not in use. Use a dry, soft cloth to clean
med off.

ire may cause the lens on loader in this
remedy the problem, turn unit on, eject
to vaporize moisture inside the unit. Do
off and on. After turning unit off wait 10
on again. Do not use broken, scratched,
3r. This could result in damage to the unit.
s in this unit.

ONE (1) YEAR LIMITED WARRANTY

The Manufacture warrants to the original retail purchaser of this
unit that is or any part therein, under normal use and condition,
be proven defective in material or workmanship within 1 year
from the date of original purchase, such defect's will be repaired
or replaced at the manufactures option without charge for parts
and repair labor.

This warranty does not extend to the elimination of externally
generated static or noise, to the correction as antenna gener-
ated noise or to the cost incurred to correct this noise. The war-
ranty does not cover the removal or the reinstallation of this unit
or damage to any CD's, Speakers, accessories, or the vehicle's
electrical system.

This warranty does not the cabinet appearance or apply to
the unit or any part of the unit which, in the opinion of the
manufacture, has been damaged through alterations, improper
installation, mishandling, misuse, neglect, or accident. THE
EXTENT OF THE MANUFACTURE'S LIABILITY UNDER THIS
WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT
PROVIDED ABOVE, AND IN NO EVENT SHALL THE MANU-
FACTURE'S LIABILITY EXCEED THE PURCHASE PRICE PAID
BY THE ORIGINAL BUYER FOR THE UNIT.

WARRANTY

This warranty extends only to the original purchaser of the unit
and is not transferable. Some states do not allow limitations on
how long an implied warranty lasts, and some states do not allow
the exclusion or limitation on incidental or consequential dam-
ages, so the above limitation of exclusions may not apply to you.

This warranty gives you specific legal rights. To obtain repair
or replacement within the terms of this warranty, the radio is
to be delivered with proof of purchase and a description of the
defect(s), freight prepaid to the original dealer

ELITE

ENTERTAINMENT

EEDV01

CD/MP3/MP4/DVD Disc Player

Compatible with standard size CD, MP3, MP4 and DVD discs (4.75" or 12cm). The EEDV01 is designed to read standard DVD, MP3, MP4, CD, CD-R, CD-RW, JPEG-CD Disc. Because of variations in recording methods some discs may not play on this unit. This unit will play region 1 DVD's (USA and Canada).

USB / SD Card

This unit allows users to play files stored on both USB and SD cards including MP3 music, MP4 short video clips and JPEG photo files. The USB port will also charge many devices like iPods and MP3 players.

Built-In AM/FM Tuner

27 preset FM stations and 18 AM stations available to select.

Bluetooth® Link

This unit contains Bluetooth® technology enabling secure, wireless connections between portable and fixed devices. This unit, when enabled can place and receive cellular phone calls through the EEDV01 remote keypad and built in microphone.

The EEDV01 Bluetooth® link also enables handheld control of streaming music from users wireless device play list.

This unit supplies quality high power audio and video outputs to three different rooms. Room A receives 2.1 digital surround sound. Room B and C receive standard stereo audio.

Sound Equalization Control

Allows control of the Bass, Treble, Balance and four preset EQ settings.

 
This unit has 1 Video Input, 3 Video outputs, 4 Audio inputs, 1 Digital Optical input and 1 Coaxial Input to allow users to enjoy entertainment from other sources such as Satellite Radio, Cable and Satellite TV, VCR's, Digital Cameras, Video Game players and a convenient 3.5mm Audio Input on the front panel

for iPods and MP3 Players. These sources must be connected through the inputs on the unit or through additional accessory wall plates. The Digital Optical input is used to enable digital audio from AV components with digital optical output.

Clock

This unit has a built in clock that can display the time when any button is pressed and a sleep timer that turns off the radio for you.

EEDV01 FEATURES

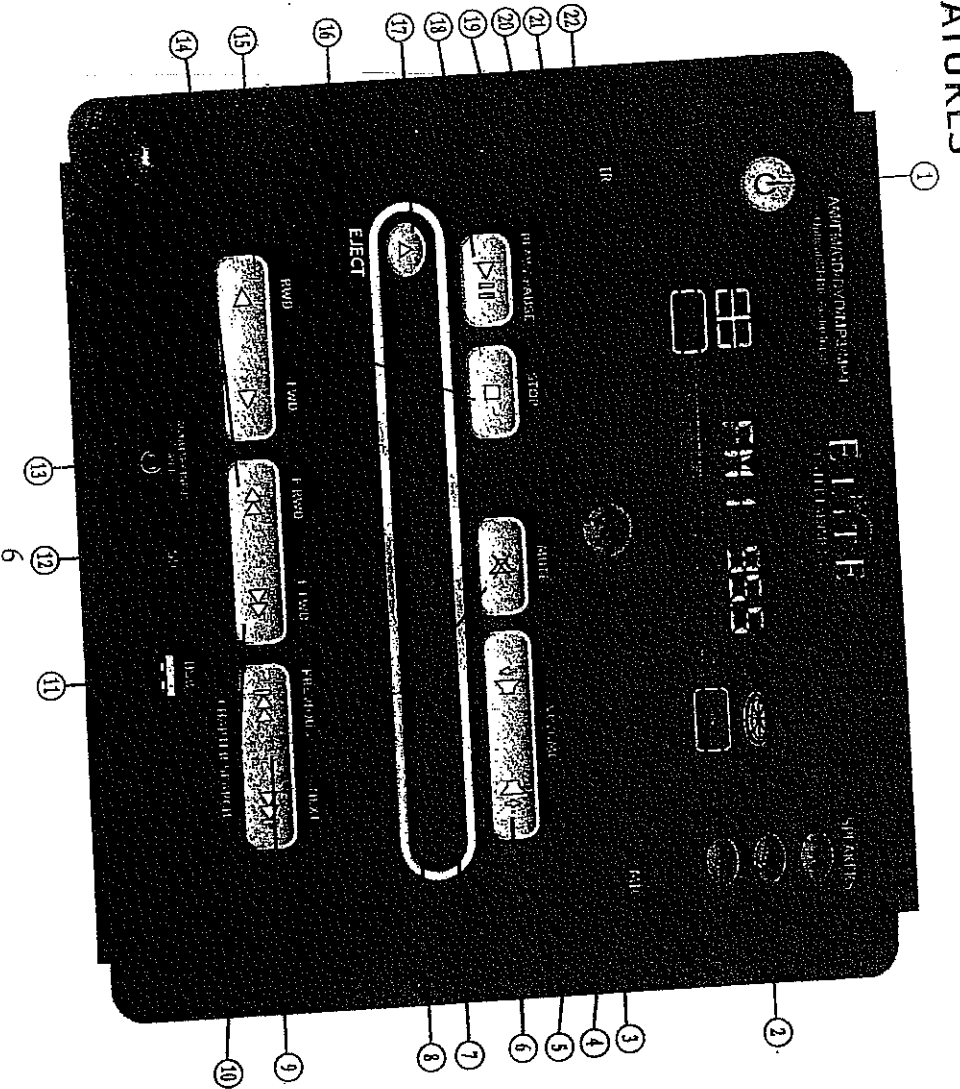

① **POWER**
Turns the power on and off.

② **SPEAKERS A-B- C**
Turns sound on or off in corresponding rooms A, B or C.

③ **MIC**
Microphone for Bluetooth® cell phone communications.

④ **CLOCK**
Press this to see time. This function works in all modes and even when the unit is turned off. Press to change to the clock display. Press and hold to turn the display indication and button illumination off or on.

⑤ **AUDIO SETUP**
Controls under this menu include Volume, Bass, Treble, Balance and EQ controls.

Volume: 39 different levels
Bass: 14 different levels
Treble: 14 different levels
Balance: 14 different levels
EQ: Pop, Class, Rock, Flat

⑥ **VOLUME**
Increase or decrease the volume in all rooms where sound is being played.

⑦ **MUTE/HOLD**
Press to turn off the sound. To turn on the sound, press again. While talking on the phone, press to put the call on hold. Works on all rooms where the sound is being played.

⑧ **CD/MP3/MP4/DVD Disc loading slot**
Insert a disc to play. *Compatible with standard size CD, MP3, MP4 and DVD discs (4.75" or 12cm). The EEDV01 is designed to read standard CD, MP3, MP4, DVD, DVD+R, DVD-R Disc. Because of variations in recording methods some discs may not play on this unit. This unit will play region 1 DVD's (USA and Canada).*

⑨ **PREVIOUS / NEXT Double Arrows**
Radio Mode: Press these buttons for station seek.
Bluetooth® Mode: Press Previous to end a phone call. Press Next to start a phone call.

⑩ **F. FWD**
Radio Mode: Press to auto scan and memorize band preset stations. Scan through all higher preset stations.
Disc Mode: Select different levels of fast forward.

 
⑪ **USB port**
The USB port will also charge many devices like iPods, MP3 players and cameras. Plus, allows users to play files stored

EEDV01 FEATURES

- ⑫ **SD Card slot**
Reads media stored on SD cards. The EEDV01 supports SD cards with up to 8GB capacity. The SD card must be formatted to be FAT or FAT32.
- ⑬ **AU1 Port**
Audio Input from MP3 or iPod player. This is a 3.5 MM input.
- ⑭ **F, RWD**
Radio Mode: Press to auto scan and memorize band preset stations. Scan through all lower preset stations.
Disc Mode: Select different levels of fast reverse.
- ⑮ **FRWD and RWD buttons**
Radio Mode: Press to select next frequency, higher or lower.
DVD Mode: Moves menu selection.
- ⑯ **STOP**
Press to stop playback of disc. Press Play to continue the playback.
- ⑰ **EJECT**
Press to eject a Disc from your EEDV01 built in player.
- ⑱ **PLAY / PAUSE**
Press to play disc or pause playback of disc.
- ⑲ **Bluetooth®**
Press this to enable Bluetooth® connectivity.
- ⑳ **AM/FM**
Allows you to select FM1, FM2, FM3, AM1, or AM2. Each band can be auto programmed with 9 station presets. 27 total preset stations for FM and 18 total preset stations for AM. (See FRWD or FRWD Radio Mode for auto scan features.)
- ㉑ **MODE**
Select between AU1, AU2, AU3, AU4, AV1, BT, Radio
Note: Pressing and Holding the MODE button for 10 seconds will re-boot the radio and reset all defaults. It will leave the radio off. Press the on button to continue operation.
- ㉒ **IR**
Infrared remote sensor.


on USB and USB attached media devices, including music, video and photo files. The EEDV01 supports USB flash drives with up to 8GB capacity. The USB drive must be formatted to be FAT or FAT32.

DISPLAY SCREEN

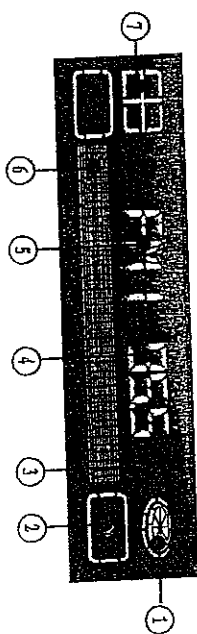

- ① REMOVABLE MEDIA
- ② EQ SETTINGS
- ③ PRESET
- ④ FREQUENCY
- ⑤ BAND
- ⑥ VOLUME
- ⑦ STEREO

 RADIO OPERATION

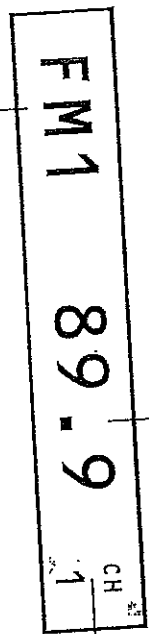

② Frequency Indicator

① Preset Numeral Indicator

③ Band Indicator



POWER

Turns the power on and off.

 
Press for power "On or Off"

Radio Reception Mode

Press to access the radio, press to activate desired band: AM1, AM2, FM1, FM2, FM3.



Activate radio Press for desired Band



Manual Tuning

Select Band, Select single arrowed button to move the channels down or up.

Select Band

Channel Down

Channel Up

 
 
Auto Search Tuning

Push to auto search for an available station at a higher or lower frequency. When this function is selected the unit will stay at the selected station until another function is selected.



Manual Frequency Presets (Remote Control Only)

Select Band, Select desired frequency, Hold desired numeral for 3 seconds. Frequency is set. Repeat to change. Frequency can be preset for AM1, AM2, FM1, FM2, FM3.

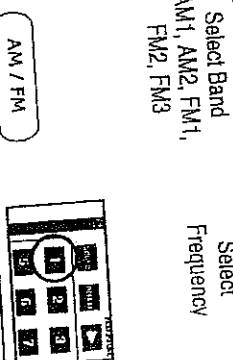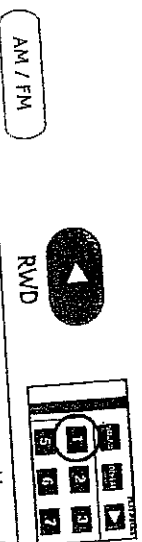


Recall Frequency Presets (Remote Control Only)
Select Band AM1, AM2, FM1, FM2, FM3, then select desired numeral

RADIO OPERATION


Auto Best Station Memory

 While in FM1 if you press the FAST FWD button the radio will start scanning from low to high frequencies, or FAST RWD button the radio will start scanning from high to low frequencies. Each strong station found will be stored in a preset button until all 27 FM presets are full. You can also do this with the AM band. There are 18 presets available for the AM band.

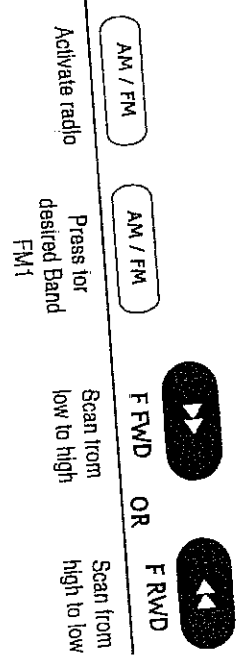

Clock Setting the time

 Press and hold the CLOCK button for 3 seconds. Hour will flash. Use the VOLUME UP/DOWN to set correct hour. Press SOUND button move to minutes. Minutes will flash. Use the VOLUME UP/DOWN to set correct minutes. Press the CLOCK button to memorize

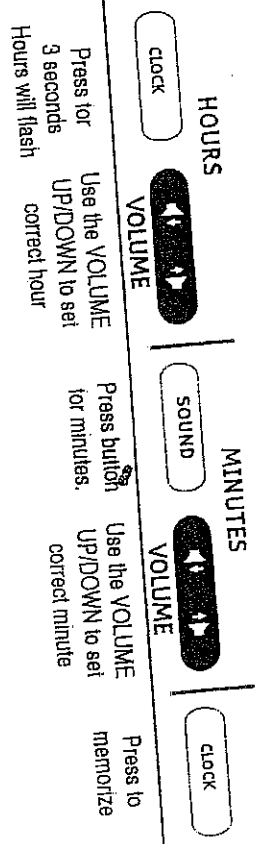

STEREO/XM Satellite Radio

SEE Accessories Page 30.

DVD/CD/MP3/MP4 OPERATION

② Chapter on DVD / Track on CD-MP3

01-02-05:15

③ Title of DVD

④ Elapsed Time on DVD-CD-MP3

Load a Disc

There are several ways to select and load a disc in the EEDV01. If you have left a disc in the unit you can just press PLAY. If you are using the remote, press the PLAY button. Either of these options will start the disc playing. Another way to play a disc is to insert it into the slot. The unit will switch to LOAD by it self.



Insert Disc into built-in
Player loader,
label side facing up

LOAD

LOAD will automatically
appear in the display



Eject a Disc

Regardless of which function is playing, if the eject button on the front panel or the remote control is pushed, the unit will stop playing and eject the disc.

The unit will keep the disc in the slot with EJECT showing on the Digital Display. If there is no disc inside the unit, a disc placed in the slot will be taken inside automatically with LOADING showing on the Digital Display.

NOTE: When the unit ejects and the disc isn't removed after 1 minute, the unit will automatically reload the disc. This feature protects the disc from being dropped and damaged.

Press EJECT



DVD/CD/MP3/MP4 OPERATION

PLAY / PAUSE

Normally, when the unit accepts a disc with no Playback Control, the unit will play the disc from the beginning. When a Playback Control exists, the user needs to push the PLAY button to start to play the disc. If the user pushes this button again, the unit will pause the disc. To release Pause, push this button again, and play will continue.



 
PLAY/PAUSE

Push to pause disc.



PLAY/PAUSE

When disc is paused, push to play disc.



STOP

Stop

When the unit is playing, push the STOP button to stop playing the disc.

Push the STOP button to stop playing the disc.



F RWD



F FWD

Fast Reverse / Fast Forward

Regardless whether you use fast forward or fast reverse, (during DVD mode) there are 6 different speeds to select from: 1X, 2X, 4X, 8X, 16X, 20X. To select a normal speed, push the PLAY button. The unit will immediately play the disc at a normal speed. On the unit the PLAY button must be pressed second time to Play from Pause.

Push the Fast Rewind button to rewind DVD

Push the Fast Forward button to advance the DVD

Previous / Next

Pushing the Previous button, the unit will play the disc from the beginning of the previous track. Pushing the Next button, the unit will play the disc from the beginning of the next track.

PREVIOUS



 
NEXT



To Load USB and SD Media

Insert USB device or SD card into proper socket on the front of the radio to begin playing media. To view, navigate and select between music and video/photo media the TV or Monitor must be on and set to AV mode. Use remote NAVIGATION buttons to navigate on screen menu.

Because of variations in 3rd party recording methods some discs, USB devices or SD cards may not play on this unit. Also, the SD and USB ports are capable of playing short video clips. Long playing video files may experience buffering delays and video freeze if viewing is attempted through these ports. Bluetooth® is not video enabled and will not play video files.



Bluetooth® PAIRING

Pairing the EEDV01 with a Bluetooth® device

 
With the EEDV01 powered on Press the button marked "Bluetooth®" to enter Bluetooth® setup. The EEDV01 screen will report "NO LINK" until a Bluetooth® device is successfully paired with the EEDV01.

The EEDV01 will send a password request to the Bluetooth® device that reads "Enter a numeric PassKey for Elite TECHNOLOGIES *****". The factory default pass key is (0000). Enter the 4 digit numeric code to unlock the Bluetooth® connection. The EEDV01 will send a confirmation request to the device that reads "Accept Connection Request from mobile phone. Confirm mobile phone connection to successfully pair device with the EEDV01."

Pairing the EEDV01 to a cell phone will configure the EEDV01 to allow hands-free listening and talking. The built in microphone is located on the face of the EEDV01 with a range of 12 feet. Sound is transmitted to any of the selected rooms A, B and or C. The paired Bluetooth® connection also allows remotely controlled streaming stereo audio from the paired device from as far away as 25 feet. Bluetooth® pairing is not video enabled.




Press the
"Bluetooth®"
button to enter
setup



Enter a numeric
PassKey

PLACING A CALL

 
Placing a call with the EEDV01 Using the Radio and Remote Control buttons

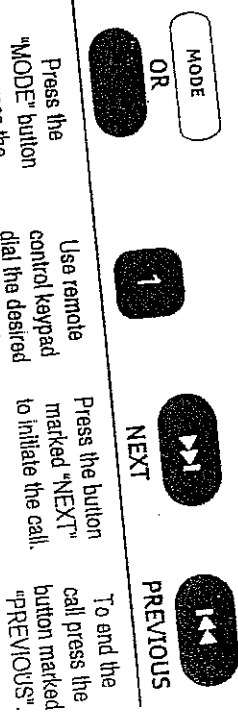

To place a call using the EEDV01 with a paired Bluetooth® enabled cell phone first enable the EEDV01 Bluetooth® mode by pressing the "MODE" button or by pressing the "Bluetooth®" button until "BT" and "LINK OK" appears on the display. Using the remote control's keypad dial the desired phone number. Press the button marked "NEXT" to initiate the call. To end the call press the button marked "PREVIOUS". To redial the last call press the button marked "NEXT".

Receiving a call with the EEDV01 Using the Radio Buttons

 To receive an incoming call while the EEDV01 is paired with Bluetooth® enabled cell phone press the button marked "NEXT". To end the call press the button marked "PREVIOUS".

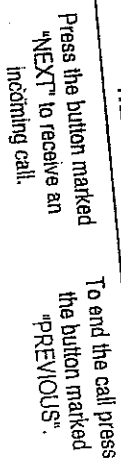


PLACING A CALL - REMOTE

Placing a call with the EEDV01

Using the Remote buttons

To place a call using the EEDV01 with a paired Bluetooth® enabled cell phone press the remote button marked "INPUT" until "BT" and "LINK OK" appear on the display.

 Using the remote numeric keys dial the desired phone number then press the remote button marked "NEXT" to initiate the call. To end the call press the remote button marked "PREVIOUS".

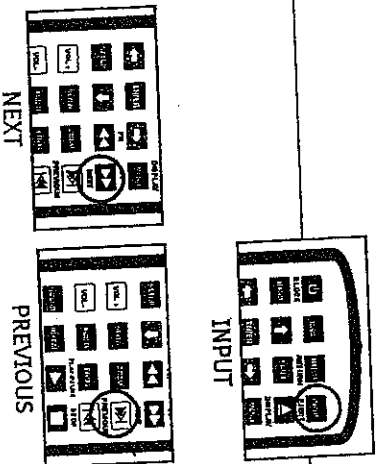


Receiving a call with the EEDV01

Using Remote Buttons

To receive an incoming call while the EEDV01 is paired with Bluetooth® enabled cell phone press the remote button marked "NEXT".

 To end the call press the remote button marked "PREVIOUS".

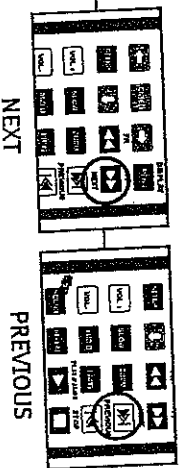


Special dialing REMOTE keypad functions


To clear an entry press the button marked SETUP

To type star (*) press the button marked FF

 To type pound (#) press the button marked FR

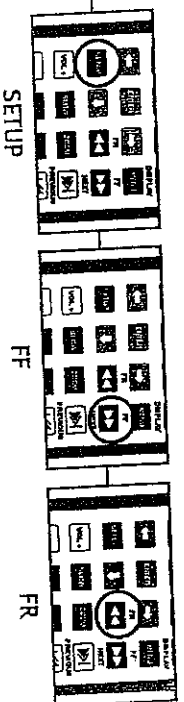

REMOTE CONTROL Guide

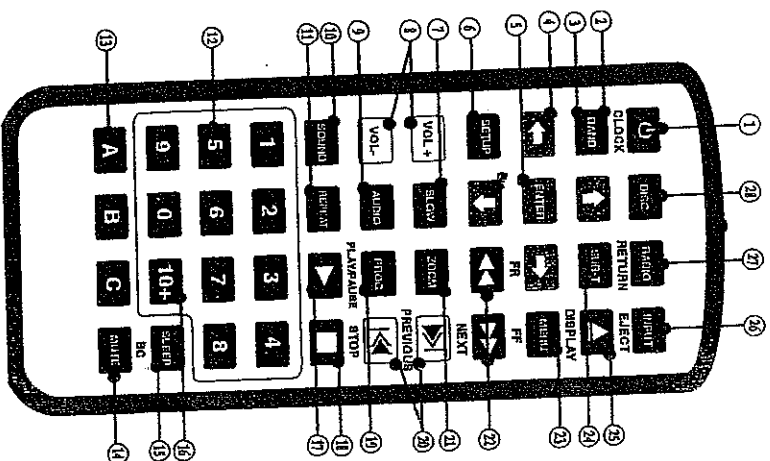 

1 Power
Turns the power on and off.

2 CLOCK
TO change clock settings press and hold CLOCK/Band key for 3 seconds. Press Volume up or down to adjust Hours. Press the Audio key then Volume up or down to adjust Minutes.

Refer to page 12 for clock setting adjustments.

3 BAND
Once the radio is selected, this button allows you to select FM1, FM2, FM3, AM1, AM2. Push the "RADIO" button and the unit switches to Radio immediately. During radio mode, press "RADIO" again to switch receiving band.

4 NAVIGATION BUTTONS
Press the appropriate button to move around any menus that are selected on screen. Center button is the "select / enter" button.

5 ENTER
Use to finalize selection.

REMOTE CONTROL Guide

⑥ SETUP

Press the "SETUP" button to activate the System Setup on screen display Video Monitor menu. Use the NAVIGATION buttons to navigate the OSD menu options.

⑦ SLOW

Pressing the SLOW button while in DVD mode turns on slow motion play back in steps of 1/2, 1/3, 1/4, 1/5 and 1/6 of standard play speed.

⑧ VOLUME

Press the "VOLUME" (+ or -) button to increase or decrease the volume level respectively.

⑨ AUDIO - DVD Only

Adjusts the surround sound mode as well as selects the language. Must be set before play.

⑩ SOUND

Radio Mode: Repeatedly pressing the "SOUND" button moves you through 6 modes. VOLUME, BASS, TREBLE, BALANCE, EQ and TIME. Adjustment in any one of these modes is done by pressing the "VOLUME" (+ or -) key. Controls can be modified differently for each room.

⑪ REPEAT

DVD Mode: Press "REPEAT" to repeat the current track being played. Press it twice to repeat playing all of the tracks.

CD, MP3, VCD Mode: Press "REPEAT" to repeat the current track being played. Press it twice to cancel the repeat function.

⑫ 0-9 NUMBERS

Radio Mode: You can select one of the 9 stored stations on each band by pressing any one of the number buttons (1-9).

Disc Mode: You can select any track directly by using the number buttons (0-10+). *Example: If you want track number 25. Consecutively press the number 2, then 5 and track number 25 will begin to play.*

⑬ A, B and C Rooms

Turns sound on or off in the corresponding rooms A, B or C.

⑭ MUTE / BC

Press the "MUTE" button to turn off the sound in all rooms A, B, and C. Press it again to resume the previous sound levels. Pressing the BC button for 5 seconds returns the system to default settings.

REMOTE CONTROL Guide

⑮ SLEEP

Selects timing for delayed turn-off mode. Available increments 90, 80, 70, 60, 50, 40, 30, 20 and 10 Minutes.

⑯ 10+

Radio: N/A

Disc: Press the 10+ button to select tracks numbered higher than 100 on MP3s.

⑰ PLAY / PAUSE

Press "PLAY/PAUSE" button to suspend the playback of CD, MP3, MP4, VCD and DVD media. Press it again to return to normal playback mode.

⑱ STOP

DVD, VCD, CD: Press "STOP" to suspend playback mode. STOP will display on the TV Screen. Pressing "STOP" a second time will end all disc playback.

⑲ PROGRAM

CD/VCD: You can set the program order to play, by following the steps below. Press "PROGRAM" button and the LCD displays programming P00:00. You can set the program order to play them by using (0-10+) number button, and then press "PLAY/PAUSE" to play.

Note:

- (1) Program does not function when playing MP3s.
- (2) CD Only- Allows you to re-arrange the play back order of the individual tracks differently from the order on the original disc.
- (3) If there are mistakes in programs, you can press "PROGRAM" button again then press "PROGRAM" button to play in order.

⑳ PREVIOUS / NEXT

Radio Mode: Press to select higher or lower stations.

Disc Mode: Press to select previous or Next track or chapter. Pushing the Previous button, the unit will play the disc from the beginning of the previous track. Pushing the Next button, the unit will play the disc from the beginning of the next track.

㉑ ZOOM - DVD Only

DVD, VCD: Press the "ZOOM" button once to enable 2X zoom mode. Pressing the "ZOOM" button repeatedly moves the zoom mode through 3X, 4X, 1/2X, 1/3X, and 1/4X zoom levels. Press "ZOOM" again to exit the zoom mode.

㉒ FAST REVERSE / FORWARD

Press to select different levels of Fast Reverse or Fast Forward. Press Play to resume selection.

REMOTE CONTROL Guide

②③ MENU / DISPLAY

DISC only. Selects upper menu. Press the button for 3 seconds to display the status of the DVD or CD that is currently playing.

CD/VCD/DVD Mode: Press the "DISPLAY" button and the

EEDV01 Display Screen and attached Video Monitor will show single track elapsed time, single track remaining time or entire disc time. It also shows the track being played and the amount of the whole disc.

MP3 Mode: Press the "DISPLAY" button and the OSD will show single track elapsed time only.

②④ SUBTITLE (SUB-T) / RETURN

DVD only. Returns to previously selected tracks. Press to select language or to turn off subtitles. Press and hold for 3 seconds to return to previous chapter.

②⑤ EJECT

When the unit is in Disc Play mode, pushing the "EJECT" button will eject the disc. When the unit ejects a disc and the disc is not removed after 1 minute, the unit will automatically reload the disc.

②⑥ INPUT

Press to select AU1, AU2, AU3, AU4, AV1 and BT.

②⑦ Radio

This function selects the Radio.

②⑧ Disc

 
 
 
Press to select Disc mode when a disc is already in the unit.
Press Disc to select USB or SD.

To view, navigate and select between music and video/photo media the TV or Monitor must be on and set to AV mode. Use NAVIGATION buttons to navigate on screen menu.












SYSTEM SETUP

Press the "SETUP" button to activate the System Setup on screen display Video Monitor Only menu.

Use the NAVIGATION buttons to navigate the following OSD menu options.








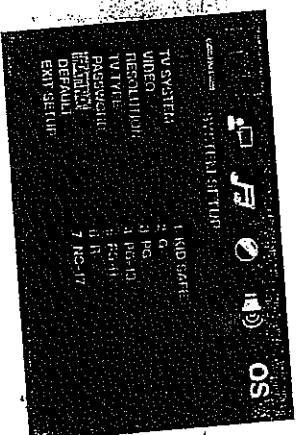
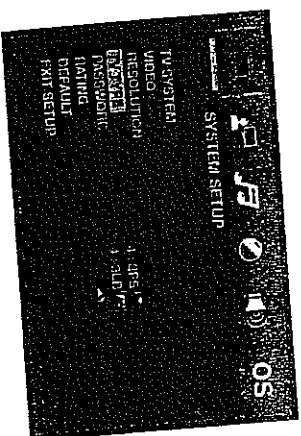
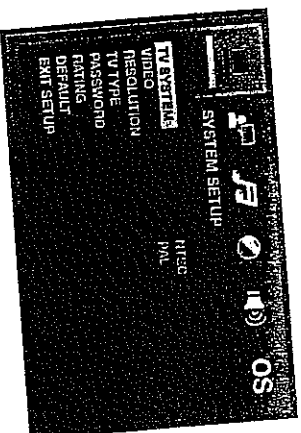


LANGUAGE SETUP

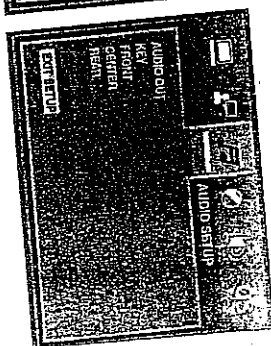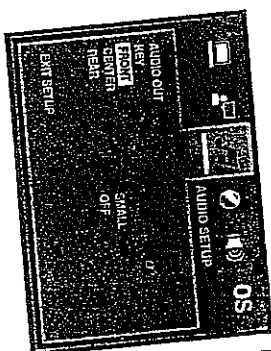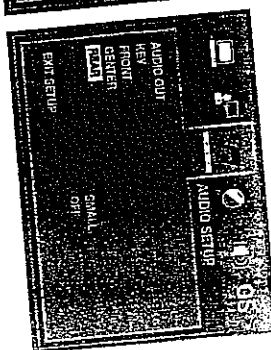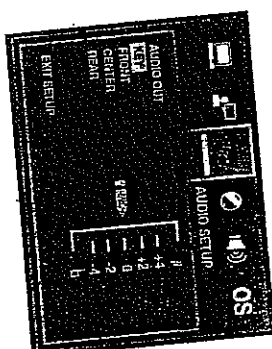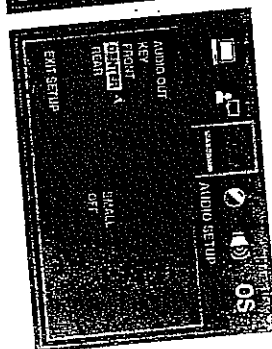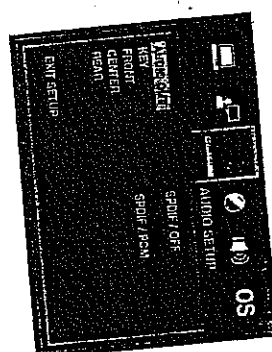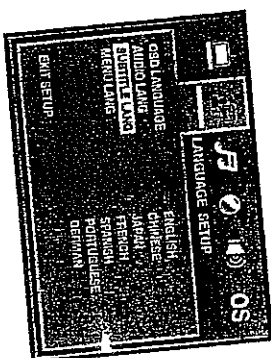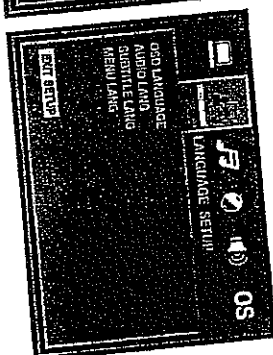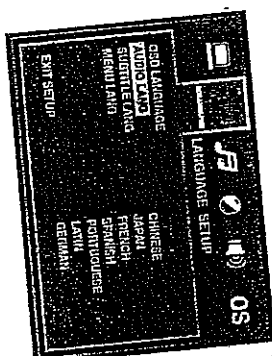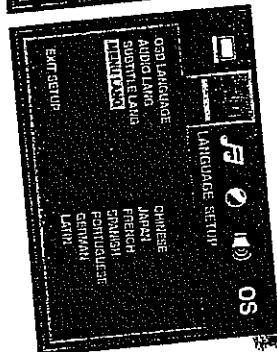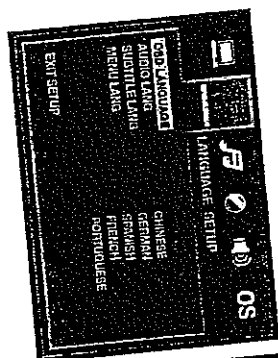           


AUDIO SETUP

          VIDEO SETUP

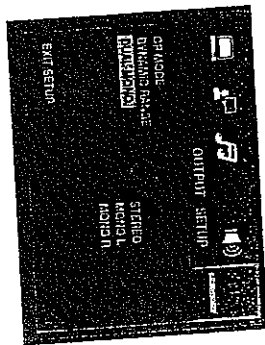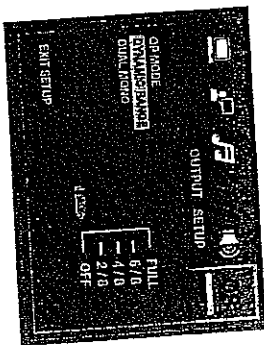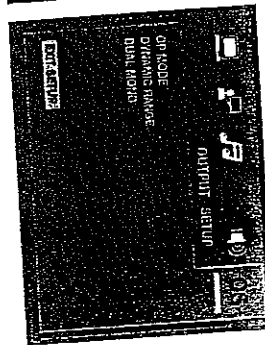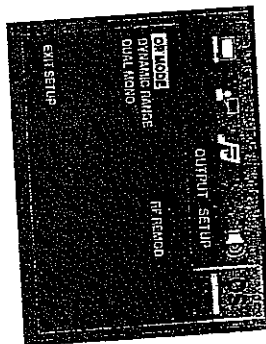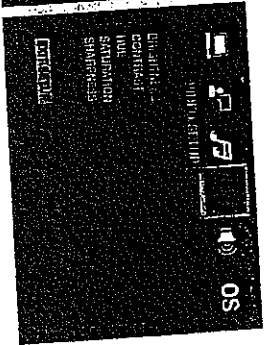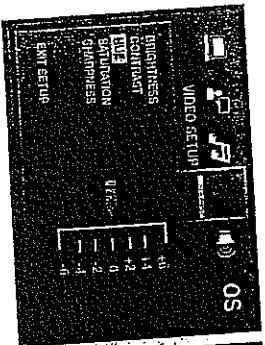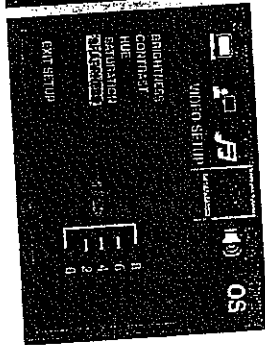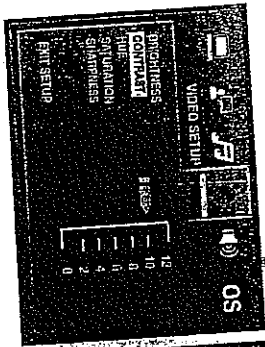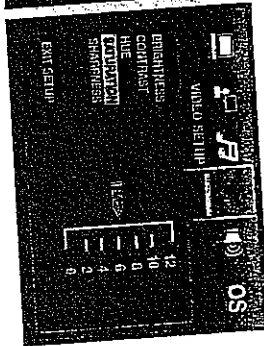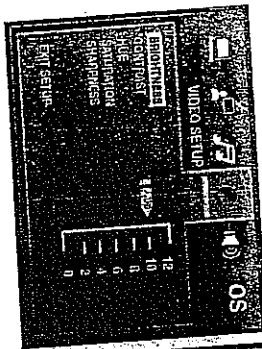

OUTPUT SETUP

 WIRING DIAGRAM

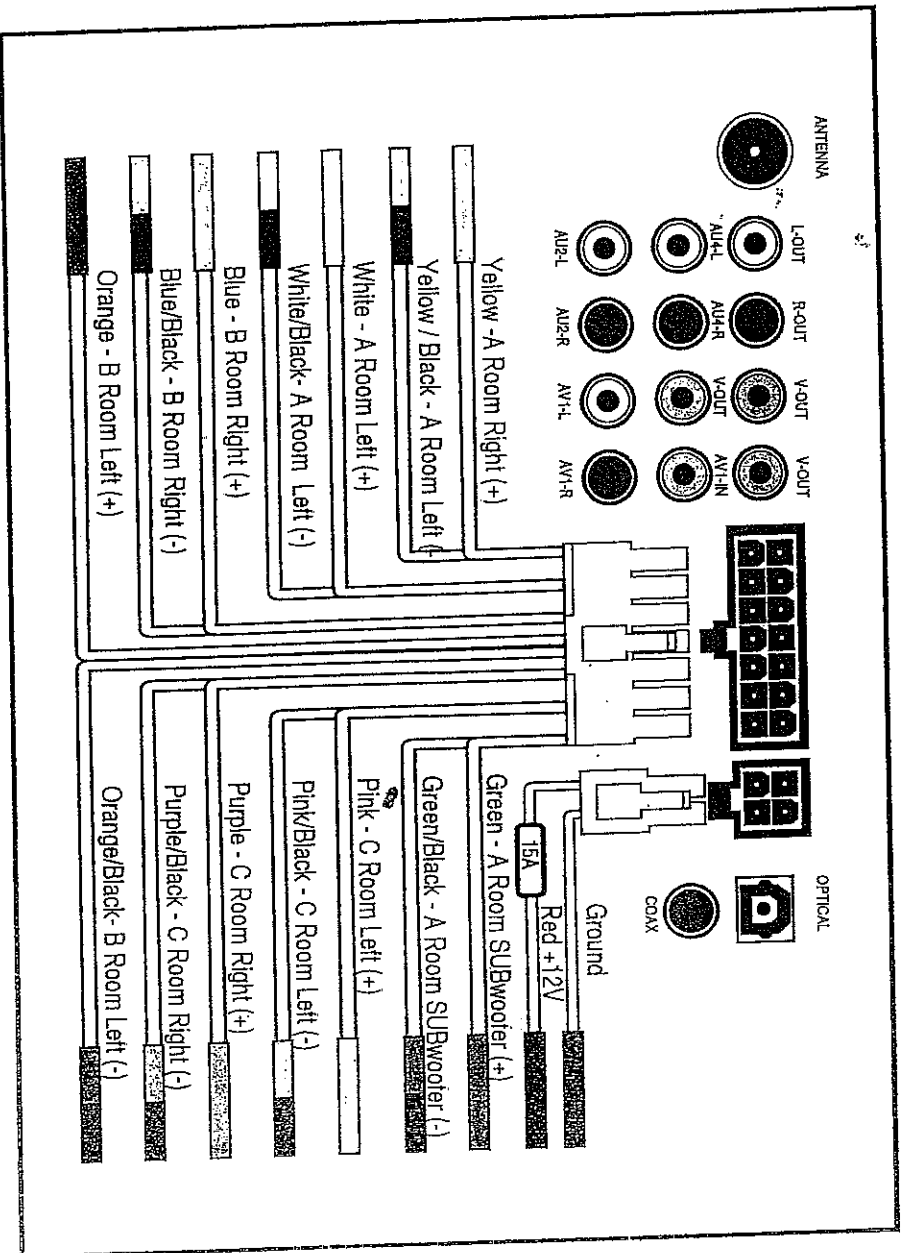

TROUBLESHOOTING

No Power

- Check for blown fuse. If fuse is blown, replace with correct fuse.

Some errors occur in the LCD or no function when pressing the button.

- Turn off the unit and restart the unit again. Use Factory Default Restart.

Poor radio reception or static.

- Antenna may not be the proper length. Make sure the antenna is fully extended. Antenna may be broken. Replace antenna.
- The broadcast signal is too weak.
- The antenna is poorly grounded. Check and make sure the antenna is properly grounded at its mounting location.

Disc cannot be loaded

- Disc is loaded in the machine. Clear the disc by pressing eject

No Picture.

- The Video line from the main unit to the TV is not connected properly. Check connections.
- Improper setting of the TV SYSTEM. Set the TV SYSTEM to "PAL" or "NTSC", according to the connected television.

Disc error appears.

- The disc may be damaged or dirty. Clean disc and retry.

When there is no color on video.

- Turn off the unit and restart the unit again. Use Factory Default Restart.

FACTORY DEFAULT RESTART

Press and hold MODE button for 10 seconds - Unit will shut off. Restart unit by pressing the ON button. Factory defaults will be reset with this type of restart.

NOTE:

If any of the problems persist after check list has been made, consult your nearest service dealer. Never attempt to disassemble your unit by yourself.

 
QUICK START GUIDE

AM/FM/CD/DVD/MP3/MP4 Digital 2.1 Surround Sound - Optical SPDIF Audio Input

- ① **POWER**
Turns the power on and off.
- ② **SPEAKERS A-B-C**
Turns sound on or off in rooms A, B or C.
- ③ **MIC**
Microphone for Bluetooth® call phone communications.
- ④ **CLOCK**
Displays users set time.
- ⑤ **AUDIO SETUP**
Selects audio setup menu.
- ⑥ **VOLUME**
Increases or decreases the volume in all rooms.
- ⑦ **MUTE/HOLD**
Press to turn off and on the sound.
- ⑧ **CD/MP3/MP4/DVD Disc loading slot**
- ⑨ **PREVIOUS / NEXT**
Select previous and next chapter in DVD
- ⑩ **F. FWD**
Selects next frequency higher.
- ⑪ **USB port**
Changes and reads USB devices.

Radio - Remote

1. Press the lighted red "POWER" button on the front panel to turn on the unit.
2. Select speakers "A" for living room, "B" for bedroom and "C" for outdoor speakers.

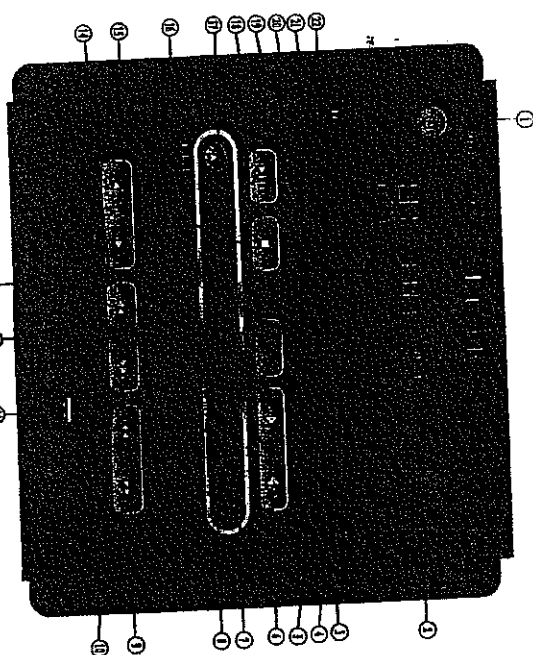

3. To listen to radio press "AM/FM" to select bands AM1, AM2, FM1, FM2 or FM3.
4. **RADIO:** To tune up or down to the next station press "FWD" or "RWD"
4. **REMOTE:** To tune up or down to the next station press "NEXT" or "PREVIOUS"
5. To auto program any available stations into the (27 FM) and (18 AM) memory station presets enter FM band and press "FWD" and the EEDVO1 will automatically scan available radio stations and load them into station preset memory. Repeat this auto scan function for both AM and FM bands. Use the remote control numeric keypad 1-9 to recall the memorized station presets.

 
28

- ⑫ **SD Card slot**
Reads media stored on SD cards.
- ⑬ **AUX Port**
Audio input from MP3 or iPod player.
- ⑭ **F. RWD**
Radio Mode: Auto scan and memorize band preset stations.
Disc Mode: Select different levels of fast reverse.
- ⑮ **FWD and RWD buttons**
Radio Mode: Press to select next frequency, higher or lower.
DVD Mode: Moves menu selection.
- ⑯ **STOP**
Press to stop playback of disc.
- ⑰ **EJECT**
Press to eject a Disc from your EEDVO1 built in play
- ⑱ **PLAY / PAUSE**
Press to play disc or pause playback of disc.
- ⑲ **Bluetooth®**
Press this to enable Bluetooth® connectivity.
- ⑳ **AM/FM** Allows you to select FM1, FM2, FM3, AM1, or AM2.
- ㉑ **MODE**
Select: AU1, AU2, AU3, AU4, AV1, BT, Radio
- ㉒ **IR**
Infrared remote sensor.

trial numeric keypad 1-9 to recall the memorized station presets.

6. To manually preset a station tune radio to the desired station, press and hold a number 1-9 on remote keypad to commit the station to memory. To recall that station press the remote preset number you selected.

QUICK START GUIDE

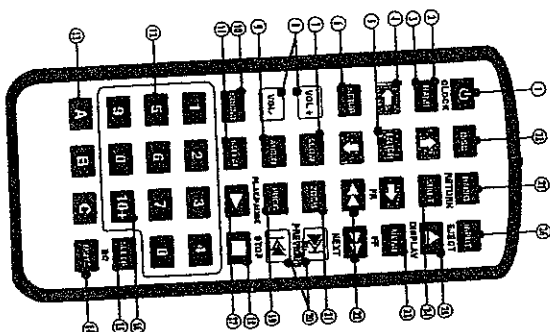

- Bluetooth®**
1. Press lighted red "POWER" button on the front panel to turn on the EEDV01.
 2. Press the "Bluetooth®" button.
 3. On handheld go to setup and "Add Device" then "Search for Device".

- 1 POWER**
Turns the power on and off.
- 2 CLOCK**
Use to change clock settings.
- 3 BAND**
Select FM1, FM2, FM3, AM1, AM2.
- 4 NAVIGATION BUTTONS**
Press the appropriate button to move around menus.
- 5 ENTER**
Use to finalize selection.
- 6 SETUP**
Use to activate the System Setup on screen display Video Monitor menu.
- 7 SLOW**
Pressing SLOW enables slow motion play back in steps of 1/2, 1/3, 1/4, 1/5 and 1/6 of standard play speed.
- 8 VOLUME**
Increase or decrease the volume.
- 9 AUDIO - DVD Only**
Selects audio setup menu.
- 10 SOUND**
Radio Mode: 5 modes, VOLUME, BASS, TREBLE, BALANCE, EQ and TIME.
- 11 REPEAT**
DVD Mode: Repeat current track or all tracks.
CD, MP3, VCD Mode: Repeat current track or cancel function.
- 12-9 NUMBERS**
Radio Mode: One of the 9 stored stations on each band by pressing any one of the number buttons (1-9).
Disc Mode: You can select any track directly by using the number buttons (0-10+).
- 13 A, B and C Rooms**
Turns sound on or off in the corresponding rooms A, B or C.
- 14 MUTE / BC**
Press to turn off and on the sound.
- 15 SLEEP**
Delayed turn-off in increments of 30, 60, 70, 80, 90, 40, 30, 20 and 10 Minutes.
- 16 10+**
Press the 10+ button to select tracks numbered higher than 100 on MP3s.
- 17 PLAY / PAUSE**
Press to play disc or pause playback of disc.
- 18 STOP**
Press to stop playback of disc.
- 19 PROGRAM**
CINCH: You can set the program order to play.
Radio Mode: Press to select higher or lower stations.
Disc Mode: Press to select previous or Next track or chapter.
- 20 PREVIOUS / NEXT**
Radio Mode: Press to select higher or lower stations.
Disc Mode: Press to select previous or Next track or chapter.
- 21 ZOOM - DVD ONLY**
Press to zoom 3X, 4X, 12X, 16X, and 18X.
- 22 FAST REVERSE / FORWARD**
Press to select different levels of Fast Reverse or Fast Forward. Press Play to resume selection.
- 23 MENU / DISPLAY**
Disc only: Press to display the status of the DVD or CD that is currently playing.
MP3 Mode: Press the "DISPLAY" button and the OSD will show single track elapsed time only.
- 24 SUBTITLE (SUB-T) / RETURN**
DVD only: Returns to previously selected tracks. Press to select language or to turn off subtitles.
- 25 EJECT**
Press to eject a Disc from your EEDV01 built in player.
- 26 INPUT**
Press to select AV1, AV2, AV3, AV4, AV1 and BT.
- 27 Radio**
This function selects the Radio.
- 28 Disc**
Press to select Disc mode when a disc is already in the unit. Press Disc to select USB or SD.

CD MP3 DVD

1. To load a disc (CD, MP3 or DVD) insert disc into slot. Unit will read the disc and begin play.
2. Press "Next" or "PREVIOUS" to select tracks on CD's, MP3's and Chapters on DVD's.

3. Press "EJECT" to remove disc.

SPECIFICATIONS

Overall Dimensions	9-5/8" (W) x 8-1/2" (H) x 6" (D)
Mounting Dimensions	7-3/4" (W) x 7-1/2" (H) x 5" (D)
Net Weight	5lbs (2.3Kg)
Voltage	12V DC Negative Ground (11.0V - 15.0V allowable)
Maximum Current Consumption	9A
Total Continuous Power Output	50W
Load Impedance	4Ω (4-8Ω allowable)
Total harmonic distortion	Typical 0.02% Maximum 0.3%
DVD Deck Section, Discs Played	DVD, MP3, MP4, CD, CDR, CD-RW, JPEG-CD
Video System	AUTO / PAL / NTSC
Video Section	4:3 Letter Box and 4:3 Pan Scan, 16:9
Video Output level	1.0Vp-p +/-0.2V 75ohms
AM Tuner Section, Frequency Range	530 - 1710KHz (U.S.A.)
FM Tuner Section, Frequency Range	87.5-107.9MHz (U.S.A.)
Bluetooth®	Version 2.0, Class II
Advanced Audio Distribution	OPP, OBEX, SPP, A2DP, AVRCP