

# User Manual



## Model EEDV03

AM/FM CD/DVD Player




with *Bluetooth*® wireless technology



PLEASE READ THIS MANUAL BEFORE USE

## Table of Contents

Getting To Know Your EEDV03.....	- 3 -
Using the Radio.....	- 5 -
Bluetooth Pairing .....	- 6 -
Making a phone call.....	- 6 -
The Remote Control.....	- 7 -
Troubleshooting .....	- 10 -
One (1) Year Limited Warranty.....	- 12 -

 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>	 <p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
---	--	--

**WARNING:** To reduce the risk of electrical shock, do not remove cover (or open the unit). There are NO USER SERVICEABLE parts inside. Refer servicing to a PROFESSIONAL, QUALIFIED SERVICE TECHNICIAN. Any improper use of this equipment may result in fire, electric shock or other hazard.

To prevent electric shock, DO NOT open the unit.

Use only components recommended by factory when replacement parts are needed. Turn the unit off when not in use. To clean the front of this unit, turn the unit off and wipe with a soft, clean cloth.

## Getting To Know Your EEDV03



### (1) Power

This button turns the power on or off to the unit. Press this button to get started.

### (2) Multi-Room Play

Using the A, B and C buttons allows you to play audio and video in up to three rooms. Button A provides 2.1 digital surround sound which uses two stereo speakers and optional subwoofer to play TV sound. Buttons B and C provide stereo audio.

### (3) MIC

Speak into this microphone during your Bluetooth cellular phone calls. Yes, you will be on speakerphone.

### (4) Clock

Press the CLOCK button until the LED clock display flashes. Rotate the Volume (Vol) dial - or + to adjust the hour. Once the clock displays the correct hour, press the Volume (Vol) dial. You can now adjust the minutes by rotating the (Vol) dial - or +. Once the clock displays the correct minute, the new time will be saved after a few seconds (or you may press any button to exit and to save the new time.)

### (5) VIDEO/AUDIO

You can control volume, balance, treble, bass and the equalizer in this menu.

## **(6) VOLUME**

Use the volume dial to control the volume level.

## **(7) MUTE**

Press once to turn off sound. Press again to turn sound on. During a phone call press to place call on hold. This will control all rooms where sound is being played.

## **(8) DVD/CD Player slot**

To play a disc, insert here with the label side up. This unit will read most DVD, CD, but not all discs will play. This unit plays region 1 (USA and Canada) DVD discs. You may play many DVD+R, DVD-R, MP3, MP4 discs as well.

## **(9) PREVIOUS / NEXT Double Arrows**

In Radio Mode: Press these buttons and the radio will seek radio stations.

In Bluetooth Mode: Press the “Previous” button to end your phone call.

Press the Next button to start a phone call.

## **(10) AM/FM**

Use this button to select bands FM1, FM2, FM3, AM1 or AM2. You can program up to 9 preset stations on each of these bands. You may program up to 27 FM stations and 18 AM stations.

## **(11) USB port**

You can use this port to connect your iPod, iPhone, iPad, camera, flash drive or MP3 player and play music, view photos or play videos. Flash drives up to 8GB can be used and should be formatted to FAT or FAT32.

When Removing the USB device

1 Stop the USB playback on the device.

2 Remove the USB cable from the stereo unit.

If you remove your USB device while it is playing, data on the USB device may be damaged.

## **(12) SD Card slot**

This slot allows you to play music from SD cards. Cards up to 8GB can be used and should be formatted to FAT or FAT32.

## **(13) Auxiliary Input**

You can use this input to connect your iPhone, iPad, iPod or MP3 player to the unit via a 3.5mm audio cable. (Cable not provided.)

## **(14) MODE**

Pressing the Mode MODE button repeatedly changes what function you are listening to or watching. You can choose between the Auxiliary Input (Au1), AU2, AU3, AU4 AV1, Bluetooth®, and the Radio.

## **(15) RWD and FWD buttons**

**In the Radio Mode:** Use this button to move to the next radio frequency, higher or lower.

**In DVD Mode:** It will change the menu selection.

**In Disc Mode:** Select different speeds of fast reverse.

## **(16) IR**

This is the sensor for infrared remote control. Point your remote in this general direction to control the unit from across the room.

## **(17) EJECT**

Use this button to eject a disc.

## **(18) PLAY / PAUSE**

Use this button to play a disc or to pause a disc.

## **(19) Bluetooth® wireless technology**

Use the Bluetooth button to activate Bluetooth features.

## **Using the Radio**

### **Power**

Turn on the unit using the Power button on the remote or on the front of the unit.

### **Radio Mode**

Press the AM / FM button to use the radio. Press to navigate through bands AM1, AM2, FM1, FM2 and FM3.

### **Tuning Manually**

Select one of the radio bands. Press either button displaying the single arrows to move up or down the radio frequencies.

### **Tuning Automatically**

Press either button displaying the double arrows to move to the next available radio station. The radio will remain on the station it has found until you change it.

### **Presetting Radio Frequencies (Remote Control Only)**

Choose one the 5 bands AM1, AM2, FM1, FM2 or FM3. Using **Manual Tuning** above, go to a radio frequency. Hold desired number on your remote control for 3 seconds. That radio frequency is now set to that number.

### **Recalling Frequency Presets (Remote Control Only)**

Choose one the 5 bands AM1, AM2, FM1, FM2 or FM3 where you have preset radio frequencies. Press the number on the remote of the preset radio frequency you would like to listen to.



### **Setting the Clock**

Press and hold “VIDEO/AUDIO” button for 3 seconds and the unit will change to set clock mode. Press and hold “VIDEO/AUDIO” for 3 seconds again and the Hour will flash. Use the VOLUME UP/DOWN buttons. Once you have reached the desired hour, press “VIDEO/AUDIO” button again and the unit moves to set up minute mode. Minutes will flash. Use the VOLUME UP/DOWN buttons to set correct minutes. Press the CLOCK button to finish set the time.

### **Using the DVD/CD Player**

If you already have a disc in the unit, simply press the “Play” button on the unit or remote control to play the disc. If there is no disc loading, insert a disc in the disc slot.

### **PLAY/PAUSE**

With a disc in the unit, use the PLAY/PAUSE button to play or pause.

### **PREVIOUS/RWD**

Pressing this button will bring you to the beginning of a track or chapter. Pressing it again will bring you to the previous track or chapter. Holding down the button will fast reverse a DVD.

### **NEXT/FWD**

Pressing this button will bring you to the end of the current track or chapter. Pressing it again will bring you to the next track or chapter. Holding down the button will fast forward the DVD.

## **Bluetooth Pairing**

Bluetooth pairing occurs when two Bluetooth devices agree to communicate with each other and establish a connection.

### **Connecting to other devices using Bluetooth® wireless technology**

When connecting to any other device, please read its user guide for detailed safety instructions.

Before registering or “pairing” this unit with your Bluetooth device (cellular phone, for example), make sure the unit is turned on. Then press the Bluetooth button to access the Bluetooth setup. The screen will display the words “NO LINK” until a Bluetooth device is successfully paired with the EEDV03 . The unit sends a password message Bluetooth device that reads “Enter a numeric PassKey for Elite Entertainment”. The factory default pass key is 0000 (four zeroes).

Next, enter the 4-digit passkey to establish the Bluetooth connection. The unit should then send a message to your device (such as your cell phone) asking you to confirm the connection. Go ahead and confirm the connection on that device and the device and the EEDV03 will be paired.

Pairing the EEDV03 to a cell phone will allow hands-free phone calls. Use the Mic (microphone) on the front of the EEDV03 to talk. Be aware that the phone conversation will be heard through all the speakers that are on, so people in other rooms may hear your conversation. You can turn off speakers in other rooms by using the A, B or C buttons.

You cannot transmit video through Bluetooth on this unit.

The paired Bluetooth connection allows you to stream stereo audio from the paired device (such as an iPhone) from as far away as 25 feet.

Once a device is paired with the unit, the Bluetooth device should connect automatically in the future.

## **Making a phone call**

Making a call from the EEDV03 using the radio buttons and the buttons on the remote control

To make a phone call from the EEDV03 that is a paired to a Bluetooth enabled cell phone, you must first place the EEDV03 in Bluetooth mode by pressing the “MODE” button or by pressing the “Bluetooth” button until “BT” and “LINK OK” is displayed on the EEDV03 screen.

1. Find the remote control that comes with the EEDV03.  
Using the keypad on the remote control, enter a phone number.  
Press the “NEXT” button on the remote control to start the call.  
To end the call, press the “PREVIOUS” button.  
To redial the last call, press the “NEXT” button.

Receiving a phone call on the EEDV03 using the radio buttons

To receive a phone call once the EEDV03 is paired with a Bluetooth enabled cell phone, press the “NEXT” button. To end the phone call, press the “PREVIOUS” button.

Additional phone call functions using the Remote Control keypad

If you want to clear an entry, press the “SETUP” button.

To dial star (\*) press the “FF” button.

To dial pound (#) press the “FR” button.

## **The Remote Control**

Some buttons have two different names. The name written above a button is the second name for that button. Some buttons just have symbols or numbers.

### **Power**

This is the red button at the top left of your remote control. This button turns the power on or off to the unit.

### **CLOCK**

Use the CLOCK button to adjust the unit’s clock. Hold down the CLOCK button for 3 seconds. Then use the Volume buttons to change the hour. When finished with the hour, press the “Audio” button. You will now be able to change the minutes by using the Volume buttons.

### **BAND**

Press the “RADIO” button to play the radio. When using the radio, the “BAND” button allows you to choose FM1, FM2, FM3, AM1 or AM2. While in radio mode, pressing the “RADIO” button again will switch the receiving band.

### **NAVIGATE ARROWS**

Use the blue keys with white arrows surrounding the “ENTER” button to move your way around onscreen menus.

### **ENTER**

After using the “NAVIGATE ARROWS” and you want to make a choice, use the ENTER button to do so.

### **SETUP**

Use the SETUP button to start the System Setup onscreen. Use the NAVIGATE ARROWS and ENTER button to move through the System Setup and to make changes.

### **SLOW**

While in DVD mode press the “SLOW” button to use the slow motion features. You can choose between five different slow motion speeds.

### **VOLUME**

Pressing the “VOLUME” (+ or -) button will increase or decrease the volume.

### **AUDIO (DVD Only)**

Before you play a DVD you can adjust the surround sound mode using this button. You can also select your language. This cannot be done once the DVD is playing.

### **SOUND**

While using the Radio use the SOUND button and then the Volume (+/-), you can adjust the following six settings: Volume, Bass, Treble, Balance, Equalizer and Time. First, use the SOUND button to move to the setting that you want to adjust. Example, if you want to adjust the Balance, press and release the SOUND button until "Balance" appears onscreen. Then use the Volume (+/-) to adjust the balance. You can adjust the settings for each of the sets of speakers.

You can set different levels for each of the three sets of speakers.

### **REPEAT**

Use the REPEAT button to repeat a specified section on your disc.

### **The numbered buttons, 0 through 9**

In Radio Mode, pressing any of the numbers 1 through 9 will allow you to choose from any of the 9 preset stations

### **Speakers A, B and C**

These buttons will turn the sound on or off to the corresponding sets of A, B or C speakers. These speakers may be located in different rooms.

### **MUTE / BC**

Pressing the "MUTE" button will turn the sound off on all 3 sets of speakers, in all rooms. If you press the "MUTE" button again, the sound will return to the volume level it was before sound was muted.

### **SLEEP**

If you want the unit to turn itself off after a certain amount of time, use the "SLEEP" button. You can have the unit turn off in as soon as 10 minutes or in as long as 90 minutes and any 10-minute interval in between.

### **The "10+" button**

For playing a disc that has MP3's, you can use this button to access tracks numbers higher than 100. This button has no function while playing the radio. In Disc mode, you can choose any track by pressing the number buttons (0-10+). For instance, if you would like to choose track 23, simply press the number 2 and then the number 3.

### **PLAY / PAUSE**

Use the PLAY / PAUSE to play or pause a disc.

### **STOP**

Pressing STOP will halt the playback of a disc and remember where you are on that disc. Pressing STOP again will stop the disc completely and you will not be able to resume playing from the point you stopped.

### **PROGRAM**

While playing a CD or VCD (this will not work on discs that have MP3's on it) you can program which order the tracks play. First, press the "PROGRAM" button and the display on the EEDV03 will show "programming P00:00". Arrange the order in which tracks play by using the number buttons on your remote. Once you have programmed the track order, press the "PLAY/PAUSE" button and the tracks will play in the order you just programmed. If there are errors in the program you created, press the "PROGRAM" button twice and the disc will play in its original order.

### **PREVIOUS / NEXT buttons**

In radio mode, pressing "NEXT" brings you to the next higher radio station. Pressing "PREVIOUS" brings you to the next lower radio station.

In disc mode, pressing "PREVIOUS / NEXT" moves you to the next track or the next DVD chapter. Pressing the "PREVIOUS" button will play the disc from the beginning of the previous track. Pushing the "NEXT" button will play the disc from the beginning of the next track.

### **ZOOM (Works with DVD only)**

While playing a DVD, this feature expands the letterbox picture to fit your screen. Keep pressing ZOOM to cycle through 6 zoom settings.

### **FAST REVERSE (FR) / FAST FORWARD (FF)**

Pressing these buttons provides different levels of fast forward or fast reverse. To return to normal play speed, press the PLAY button.

### **MENU /DISPLAY (Works with discs only)**

Pressing the MENU button for 3 seconds will display information about the DVD or CD that is currently playing.

### **(SUB-T) / RETURN (DVD only)**

SUB-T stands for subtitles. You can use this button to choose your language or to turn off subtitles. This will return you to the previously selected tracks. Press and hold this button for 3 seconds to return to previous chapter.

### **EJECT**

While in Disc Play mode, pressing the "EJECT" button ejects the disc. If you use the eject button but do not remove the disc from the tray, the disc will reload automatically after a minute.

### **INPUT**

Press the "INPUT" button to choose between Auxiliary Input (AU1), AU2, AU3, AU4, AV1 or Bluetooth.

### **Radio**

Use this function to choose the radio.

### **Disc**

Press "Disc" to choose Disc mode. A disc must be in the unit.

Press "Disc" to choose USB or SD.

To view, navigate and choose between music and photo/video media, your TV or Monitor must be on and set to its AV mode. You can do this on most TV's by using the "input" button on the remote that came with your TV.

Use the Navigation buttons around the ENTER button to navigate through the screen menu. " to "Use the Navigate keys around the ENTER button to move your way around the onscreen menu.

## Troubleshooting

You are unable to turn the unit on.	You may have blown a fuse in your RV or vehicle. If you find that a fuse is blown, replace fuse or have it replaced by a professional.
You hear static when listening to radio stations	Check to see that the antenna is extended to its full length. Make sure the antenna is attached to unit properly and completely. If antenna appears damaged, you may have to replace it. The radio broadcast signal may be too weak. Try tuning to a different station.
There is no picture on TV	The cable from the TV to the unit is not properly attached. Disconnect and reconnect cables.
Disc error message appears	The disc you are playing may be scratched, damaged and/or dirty. Disc may be inserted upside down.
The operation buttons do not function. The disc will not eject.	Turn the unit off and then after 5 seconds, turn the unit back on. If this does not correct the issue, Reset the unit
FACTORY DEFAULT RESET (WARNING: all changes you have made to settings and all radio stations you have programmed will be lost.) Press and hold the “MODE” button on the front of the unit for 10 seconds. The unit will turn off. Restart the unit by pressing the POWER button. All factory defaults will be reset.	

## FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Specifications

Dimensions: 241mm (9.48”) L x 207mm (8.15”) W x 157mm (6.18”) H

Weight: 2.3 Kg

Power Supply Requirements: 12 Volts, Negative Ground

Output Impedance: Compatible with 4-8 Ohm Speakers, 4 Ohm Minimum

Output Power: 50 Watts Total

Distortion: .02%



## One (1) Year Limited Warranty

This product (including any accessories) is warranted against defects in material or workmanship as follows:

1. **LABOR:** For a period of one (1) year from the date of purchase, if this product is determined to be defective, manufacturer will repair or replace the product, at its option, at no charge, or pay the labor charges to any authorized service facility. After the Warranty Period, you must pay for all labor charges.
2. **PARTS:** In addition, manufacturer will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts for a period of one (1) year. After the warranty period, you must pay for all parts costs.
3. **ACCESSORIES:** Parts and labor for all accessories are covered for one (1) year.

This warranty does not include service or parts to repair damage caused by acts of God, accident, disaster, misuse, abuse, negligence, commercial use, voltage inputs in excess of the rated maximum of the unit, cosmetic appearance of cabinetry not directly attributable to defect in materials or workmanship, or service repair or modification of the unit which has not been authorized or approved by manufacturer representatives. This warranty become void if the serial number on the unit is defaced, removed or tampered with.

This warranty does not cover assistance to customers for installation, set up adjustments or signal reception problems or user instructions. This warranty does not cover Products sold “AS IS” or consumables (such as batteries or fuses).

If this Product is defective in materials or workmanship as warranted above, your sole remedy shall be repair or replacement as provided above. In no event will coverage be provided to you for any incidental or consequential damages arising out of the use or inability to use the unit or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply to you. All implied warranties on this unit are limited to the duration of this expressed Limited Warranty. Some states do not allow limitation on how long an implied Warranty lasts, so the above limitations may not apply to you. This Limited Warranty gives you specific legal rights, and you also may have other rights which vary from state to state.

Contact the manufacturer of your RV if you feel you require warranty service.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Elite Entertainment is under license.

iPhone, iPod, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.

Other trademarks and trade names are those of their respective owners.

For updates to this manual please see [www.wayinterglobal.com/manuals/EEDV03manual.PDF](http://www.wayinterglobal.com/manuals/EEDV03manual.PDF)