

Installation Instructions

10" Filter Housing



To replace filter cartridge:


1. Turn off water supply.
2. Place drip pan below filter housing to catch any spillage.
3. Press red button on top of filter housing to release pressure.
4. Using spanner wrench rotate filter housing with wrench to remove sump.
5. Remove filter cartridge and dispose of properly.
6. Clean inside of filter housing with mild detergent, thoroughly rinse and wipe clean.
7. Remove o-ring from groove in housing and wipe clean. Recoat with petroleum jelly.
8. Replace o-ring in groove, making sure it is properly seated.
9. Install new filter cartridge.
10. Replace sump (hand tighten is normally sufficient).
11. Turn on water supply and check for leaks.

Caution


- Do not allow filter housing to freeze
- Remove cartridge before using anti-freeze to winterize system.
- Flush housing thoroughly before it is put back into service after winterizing.
- For best results replace cartridge every 6-12 months.
- Do not use carbon cartridges where water is microbiologically unsafe or of unknown quality.
- Maximum operating pressure is 125 psi (8.75 bar).
- Maximum water temperature is 125°F (52°C).

Warranty


Filter housings come with a limited warranty covering materials and workmanship for one year from date of purchase by original owner. Please contact dealer or distributor for warranty issues.

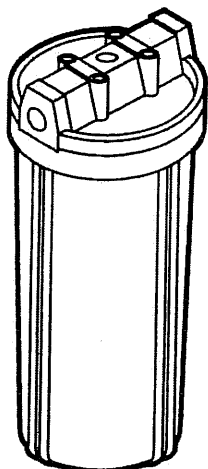

Filter housing
(4200WW14)

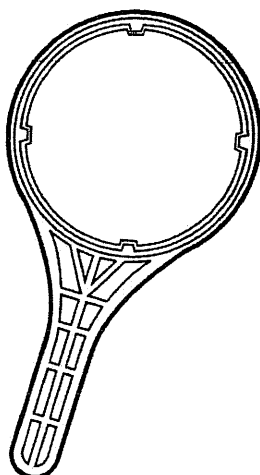

Spanner wrench
(WR100)

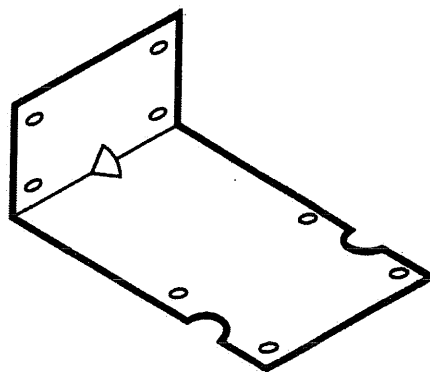

Bracket
(FM10)