 


Jensen 20" TV

# 20" 4:3 DIGITAL LCD-TV

**20"**  
LCD-TV DIGITAL COMBO SYSTEM

OPERATING MANUAL

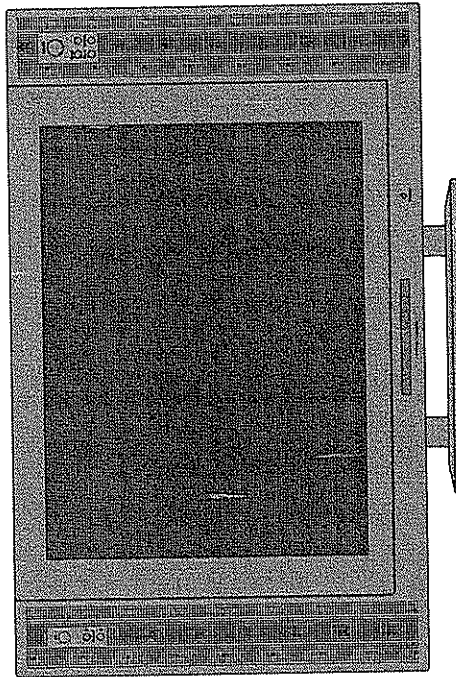

Powered by SHARP Japan TFT-LCD Panel

Please keep this operating manual for future references.

## Important Notes :

1. Before operating the unit, please read these instructions carefully.
2. Retain this manual for future reference.
3. Do not remove any WARNING stickers on the unit.
4. You are advised to follow the instructions carefully when operating the unit.
5. Do not use any chemical solvent, cleaning agent or corrosive detergent to clean away dirt on the surface of the screen. By doing so, you may cause irreversible damage to the surface of the TFT screen. To clean off dirt or fingerprints, we recommend the use of a soft damp lens cleaning cloth.
6. Using spare parts from another manufacturer may cause permanent damage to the unit.
7. Place the unit on a flat, hard and stable surface.
8. Do avoid installing the monitor screen in a position that is under direct sunlight and place unit away from hot air vent.
9. Install unit in a dry location away from condensation.
10. Ensure no metal or foreign materials are dropped in between the display screen and enclosure. Obstacles may impede smooth running of the tray and may cause electrical shorts-circuit.
11. Do not use anything to block the cooling assemblies on the unit.
12. Ensure the plugs are properly plugged in before operating the unit.
13. Should the LCD panel be broken, do avoid all human contact with the broken glass or fluid leaking out from the enclosure. If come into contact, do flush and clean affected areas with plenty of water. Seek medical attention immediately.
14. When operating the display unit, do avoid touching or pressing on the LCD glass panel. Excessive force may cause irreparable damage to the LCD screen.

## Safety Precautions:

1. Ensure the plug is securely plugged into the main socket before operating the unit.
2. Ensure the Voltage on the main socket is the same as specified on the unit.
3. In the event of thunder & lightning or when not using the unit for a long period of time, remove the plug from the main socket for safety.
4. Do not plug in too many appliances together with this unit to prevent overloading the power supply.
5. Use parts only manufactured by the unit manufacturers.
6. Request a repair report from the technician/service personnel.
7. Ensure the battery is correctly installed before using the unit.

**In case of the following emergencies, remove plug from the main socket immediately:**

1. Plug or cables are spill.
2. Any form of foreign objects dropped inside the enclosure.
3. Unit is being exposed to rain and/or water.
4. Unit unable to operate under normal operation.

### ▲ ATTENTION

1. location exposed to direct sunlight or strong artificial light
2. location exposed to high humidity, or poorly ventilated location
3. The product should not be mounted to a wall or ceiling.



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

## CONTENTS

<b>1. INTRODUCTION</b>	
Overview .....	01
Characteristics .....	02
Contents .....	03
<b>2. FRONT PANEL CONTROL</b>	
Panel Control .....	04
Input/Output .....	04
<b>3. REMOTE CONTROL FUNCTION</b>	
Controls & Functions .....	05
<b>4. INSTALLATION GUIDE</b>	
When Connecting to a TV Cable .....	06
Connecting to Other Equipment .....	07
Input (RCA) from other Equipment .....	08
Output to Other AV Equipment .....	08
Connect Power .....	09
<b>5. BASIC FUNCTIONS</b>	
Power Signal .....	10
Mode .....	10
Volume Setting .....	11
Mute Setting .....	11
Channel Search .....	11
<b>6. OPERATIONS</b>	
Menu Setting .....	12
Sleep Timer Setting .....	12
<b>Video Adjust Setting</b>	
Saturation .....	13
Sharpness .....	13
Brightness .....	14

## CONTENTS

Dark Level .....	14
Contrast .....	15
Tint .....	15
Preset .....	16
Exit .....	16
<b>Audio Setting</b>	
Type .....	17
Bass .....	17
Treble .....	18
Balance .....	18
Return .....	19
<b>CLOSED CAPTION Setting</b> .....	20
<b>V-CHIP BLOCK Setting</b> .....	21
<b>Others</b>	
Language .....	22
Channel Scan .....	22
TV Source Setting .....	23
External Setting .....	23
Return .....	23
<b>7. ANNEX A</b>	
LCD Maintenance .....	24
LCD Angle .....	24
<b>8. ANNEX B</b>	
Troubleshooting .....	25
Common Problems .....	25
<b>9. SPECIFICATIONS</b> .....	26

## 1. INTRODUCTION

 
### Overview :

A 20" Digital LCD Monitor bearing the basic features of a Television set, but comes with built-in DVD playable function. Built-in DVD playable function is a breakthrough to a household LCD Television set. It not only allows you to enjoy your DVD programs in a LCD monitor, it even saves space. There is no need to rack your brain trying to find space to accommodate a separate DVD player.

New technology in LCD monitor allows enjoyment of more high quality picture display and higher brightness; lighter in weight and slimmer body design, power saving capabilities and low radiation, giving you a safe, relax and environmental-friendly NEW visual enjoyment.

Our product uses Japan's SHARP original imported 20 inches colored "Active Matrix TFT". The Active Matrix TFT high decoding capabilities enable display of complicated or high quality images, presenting a vivid visual reproduction and beautiful visual display. Incorporated with a user-friendly menu, allowing easy customization to user preferences.


The unit comes with built-in screen display controls when used with the remote control, allowing you to make changes to the settings. It even support the use of wireless headphones, therefore you do not need to worry that the volume coming out from the monitor will disturb other people. The Digital True Surround Sound capabilities from the 3D Stereo Speaker brings you the ultimate enjoyment of audiovisual effects. Digital output function, when connected to other audiovisual devices, gives you the best enjoyment in entertainment relaxation.

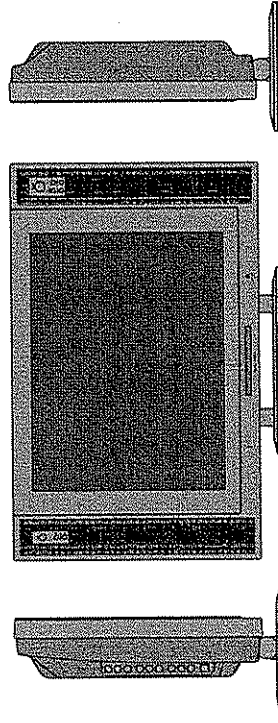


**Product Specification :**

1. 20" High Decoding LCD Panel
2. Panel Ratio : 4 : 3
3. Ultra High Brightness 450cd/m<sup>2</sup>
4. Ultra Wide Visual Angle (170°)
5. Power Saving (Save up to 40% energy under normal operation)
6. 50000hrs Long-Life Back-light
7. Low Radiation
8. High Resolution Display IC
9. CATV 2-125 Channels
10. New Slim Body Design (Save 50% Space than usual CRT Monitor)
11. Infra-Red Capabilities
12. Light Weight (Only 15% the weight of normal CRT Monitor)
13. Digital Input Option
14. Built-in Wall-Mount Support

 **Contents/Accessories :**  
(Please check the content of the Package.)

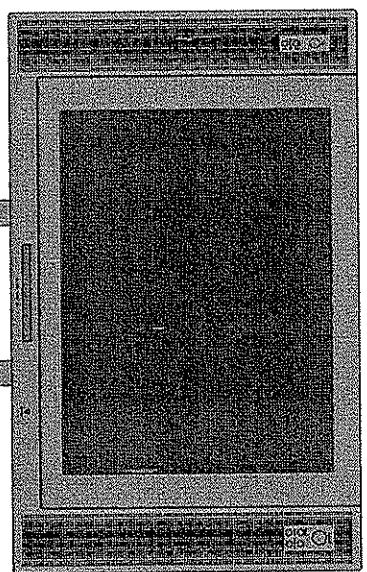

Remote Control

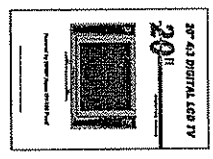 

Operation Manual



S-Video to Component Video Conversion Cable



AC Adapter



AC Cable



Antenna Cable




S-Video Cable

(\*Cables supplied subject to different plug type)

## 2. FRONT PANEL CONTROLS
 
### PANEL CONTROL :

1. POWER : Power On/Off
2. MODE : Mode Select
3. CHANNEL : Channel Select
4. MENU : Menu Setting
5. IR : IR Port for Remote Control
6. VOLUME ⊕ : Increase Volume
7. VOLUME ⊖ : Decrease Volume
8. SPEAKER : Loud Speaker
9. STANDBY : STANDBY Mode LED
10. IR STEREO TRANSMITTER : For Wireless Headphone

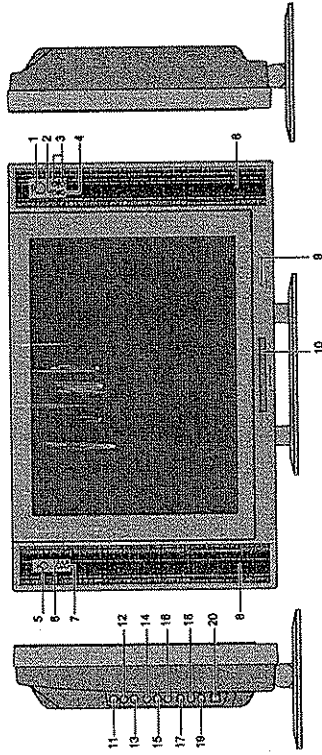


### INPUT/OUTPUT :

11. AV1 : S-Video/Component Video Input
12. AV1 : RCA Left Audio Input
13. AV1 : RCA Right Audio Input
14. AV2 : RCA Video Input
15. AV2 : RCA Left Audio Input
16. AV2 : RCA Right Audio Input
17. RCA Video Output
18. RCA Left Audio Output
19. RCA Right Audio Output
20. DVD Optical Output
21. Antenna Input
22. Power Supply Socket


04

## 3. Remote Control Function :

 (When using the remote control, point it towards the IR sensor.)

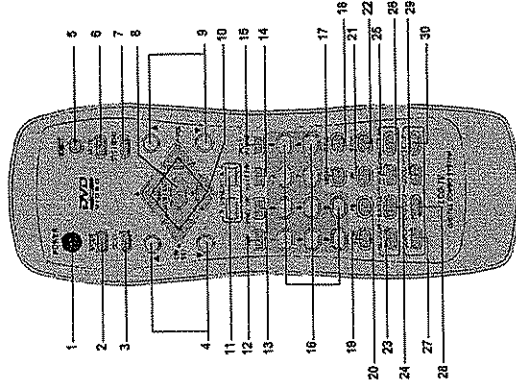

### Battery Usage Caution:

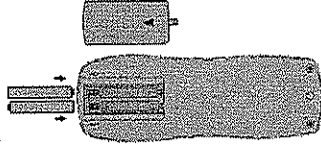 

To prevent battery leakage which may result in bodily injury or damage to the remote :

1. Install all batteries correctly, ⊕ and ⊖ as marked on the remote control.
2. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
3. Remove batteries when the remote is not used for a long time.


1. POWER : Power On/Off
2. MODE : Signal Button
3. SCAN : Channel Scanning
4. CH ▲/▼ : Channel Search Button
5. EJECT : DVD Eject Button
6. MUTE : Turn Off Volume
7. SYS MENU : System Main Menu Selection
8. SAVE/ENTER : Enter Button
9. VOL ▲/▼ : Increase/decrease volume level
10. ▲/▶/▼/◀ : Up, Down, Left, Right Button
11. MEMORY : Favorite Channel Saved to Memory Button
12. REP : DVD Repeat button
13. PREV TRK : Previous track
14. NEXT TRK : NEXT track
15. PLAY/PAUSE : Play and Pause Button
16. 1/2/3/4/5 : Numbers Button
17. MENU : DVD Main Menu
18. TITLE : DVD Title Button
19. SLOW : DVD Slow Motion
20. FB : DVD Fast Forward Play
21. FF : DVD Fast Backward Play
22. STOP : DVD Stop Play Button
23. PBC ON/OFF : DVD Restart
24. SUBTITLE : DVD subtitle select button
25. ANGLE : DVD Angle select
26. MTS : DVD Language change button
27. SEARCH : DVD Search Button
28. DVD DISP : DVD Display Button
29. ZOOM : DVD Zoom Button
30. SETUP : DVD Setting Button

05

#### 4. INSTALLATION GUIDE:
 
##### *When Connecting to a TV Cable:*


1. Remove Antenna Socket cover.
2. Plug the cable to the Input socket on the unit.
3. Connect the cable to the one you are using when needed.

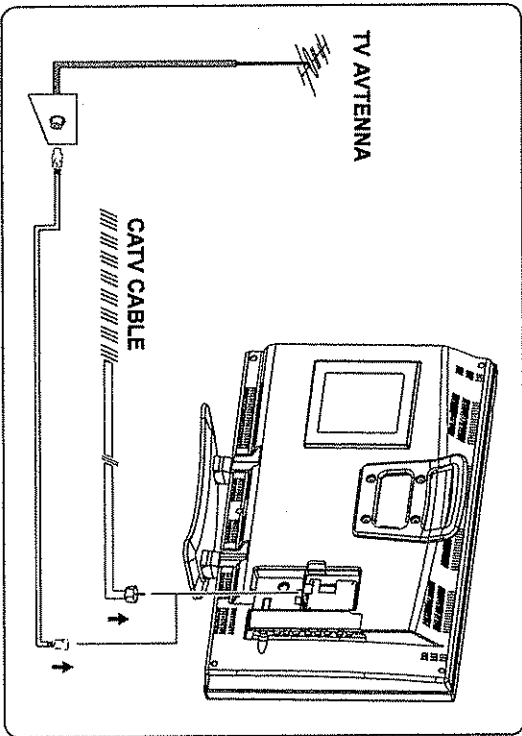


66

##### **Connecting to Other Equipment :**

 1. This unit is able to support various input setting. You can connect your video recorder, amplifier, game console etc. to the unit, to enjoy high quality, digital audio-visual effect.
2. Connect AV equipment using S-Video. (photo. 1)
3. Using the S-Video cable, connect your equipment to the S-Video/Component socket on the TV Side Input Panel.
4. Connect your AV cable to the equipment. (photo.2)

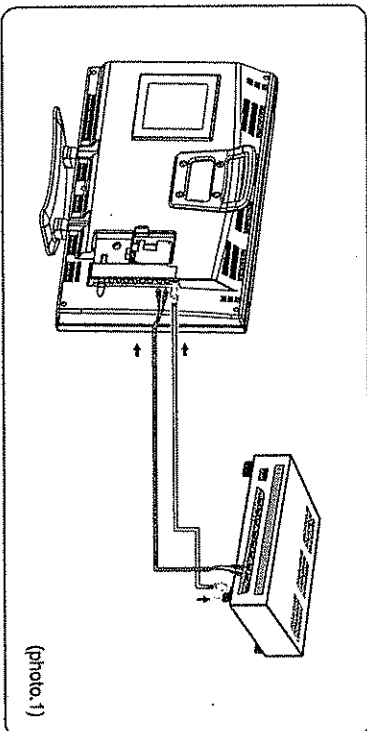

(photo.1)

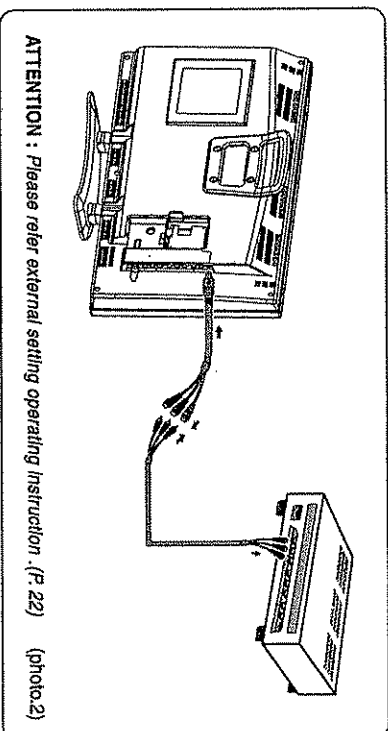 


**ATTENTION :** Please refer external setting operating instruction .(P. 22) (photo.2)

67


**Input (RCA) from other Equipment:**

 Connect to the TV AV IN 2 socket.

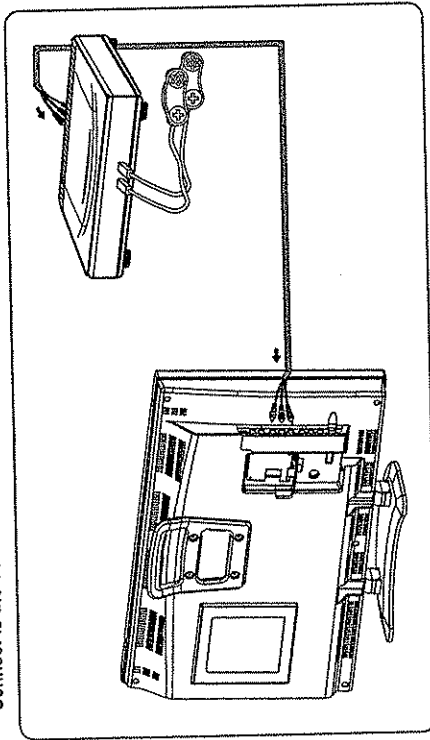


**Output (RCA) to other AV Equipment:**

 Output the AV Signal using the unit AV output socket.

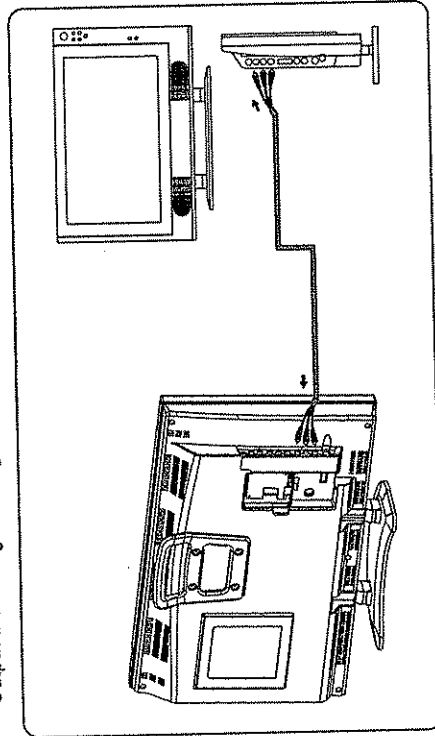

**Connect Power:**

 Connect to the power source using the power cable and adapter provided.

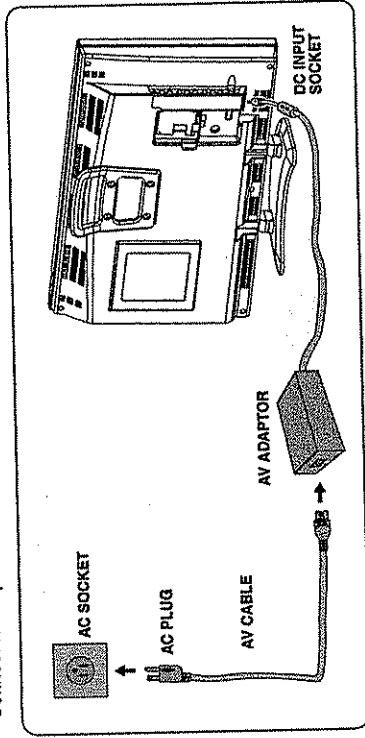


**ATTENTION:** Ensure the power supply is connected to the unit. When not using unit for a long period of time, remove power adapter socket from the main power point.

## 5. Basic Functions :

 
### POWER SIGNAL:

1. Press the "Power" button, POWER indication LED on unit turns RED in color indicating power is connected.
2. Press the "Mode" button or the "Power" button on the remote control, the POWER indication LED on the TV Front Panel will turn "GREEN in color".

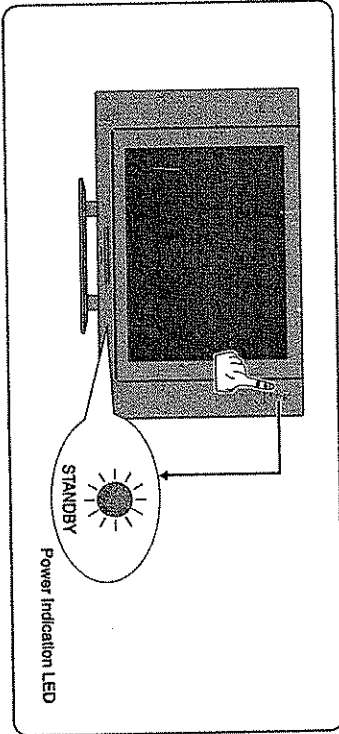

### MODE:

 1. Press the "Mode" button on the TV front panel or remote control to select from the various mode settings.
2. The mode setting status will change each time the "Mode" button is pressed – "S-VIDEO/CVBS/CHANNEL."

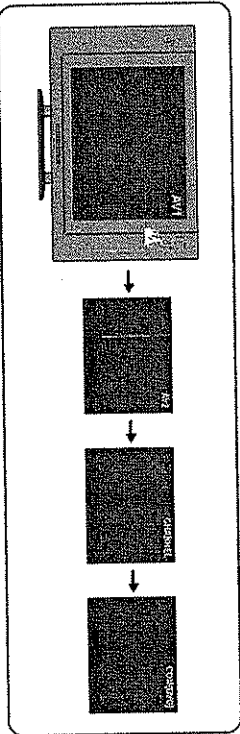


\*\* Please make sure video source is been connected properly.

10


### VOLUME SETTING:

 Press the "Volume Up/Down" (▲/▼) button on the TV front control panel or remote control to adjust the volume level.

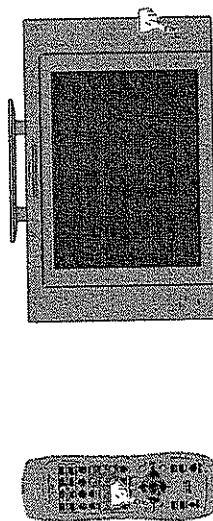

### MUTE:

 1. Press the "Mute" button on the remote control to mute speakers.
2. Press the "Mute" button again or the "Volume Up/Down" (▲/▼) button to return the sound back to the speakers.

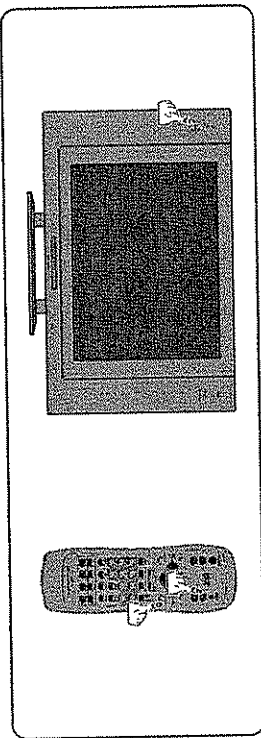

### CHANNEL SEARCH:

1. Press the "Channel Up/Down" (▲/▼) button on the remote control or the TV Front Control Panel to change/select channels.
2. Press on the Number buttons on the remote control to change/select channel directly.

 
11



## 6. OPERATIONS:




### Menu Setting :

This Unit provide the "OSD" setting, enable you to customize the setting for the following:

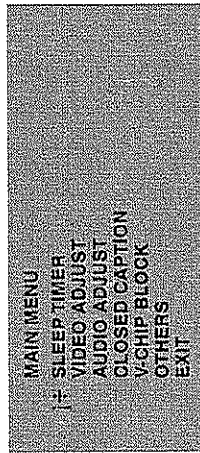



### Sleep Timer Setting:

   1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
3. Press "Left/Right" (◀/▶) button to select the desired time setting of "30/60/90/120" minutes or "OFF".
4. Press "Sys Menu" button on the remote control to exit main menu.

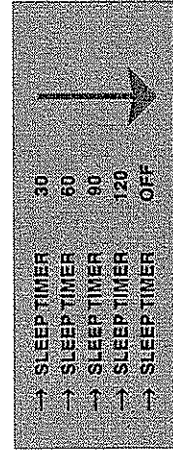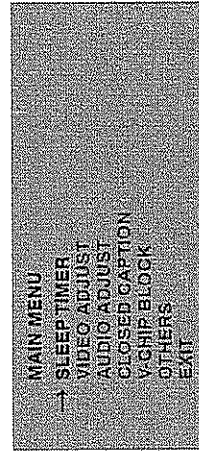



### Video Adjust Setting:

  - Saturation:**
1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
  2. Press "Up/Down" (▲/▼) button to select "Video Adjust" option.
  3. Press "Save/Enter" button to confirm the selection.
  4. Press "Up/Down" (▲/▼) button to select "Saturation" option.
  5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
  6. Press "Left/Right" (◀/▶) button to adjust the Saturation Level.
  7. Press "Sys Menu" button on the remote control to exit main menu.

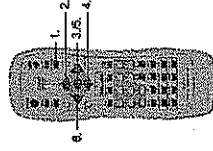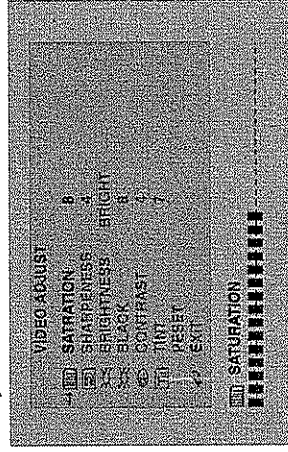



### Sharpness:

  1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Sharpness" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to adjust the Sharpness Level.
7. Press "Sys Menu" (◀/▶) button on the remote control to exit main menu.

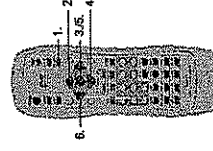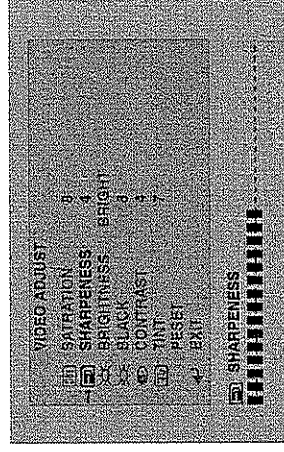



### Brightness:

  1. Press "Sys Menu" button on the remote control. Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Brightness" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Brightness Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

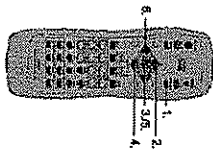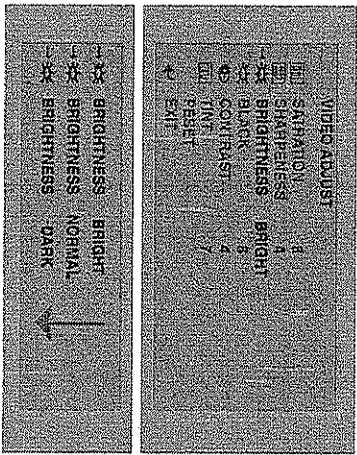

### Black:

 
 
1. Press "Sys Menu" button on the remote control. Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Black" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Dark Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

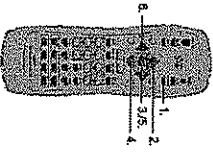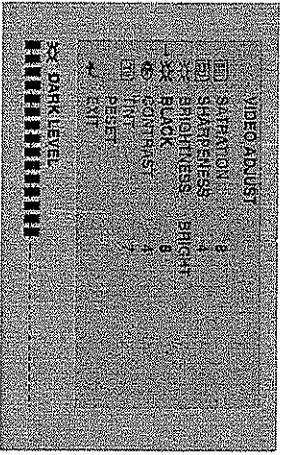

14



### Contrast:

  1. Press "Sys Menu" button on the remote control. Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Contrast" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Contrast Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

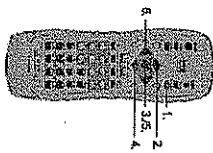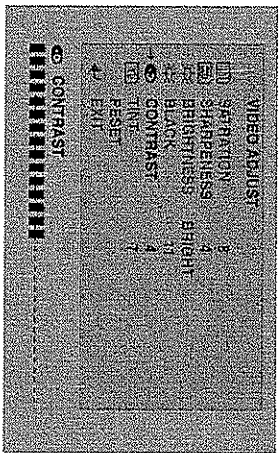

### Tint:

  
1. Press "Sys Menu" button on the remote control. Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Tint" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Tint Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

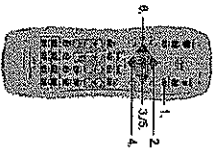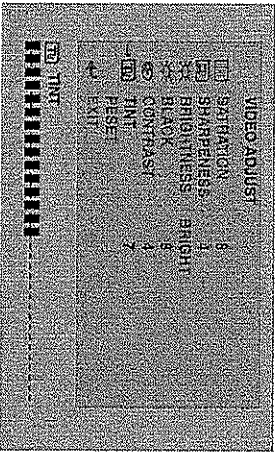

15


### Preset:

 1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Video Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Preset" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to reset to factory setting.
7. Press "Sys Menu" button on the remote control to exit main menu.

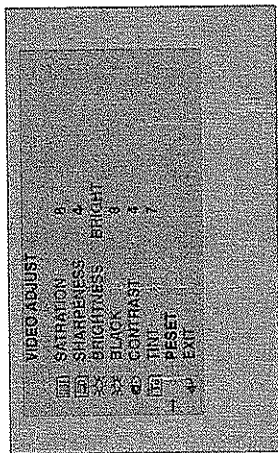

### Exit:

 
1. Select the "Return" option under the "Video Adjust" Menu using the "Up/Down" button.
2. Press "Save /Enter" button to return to the Main Menu Screen.

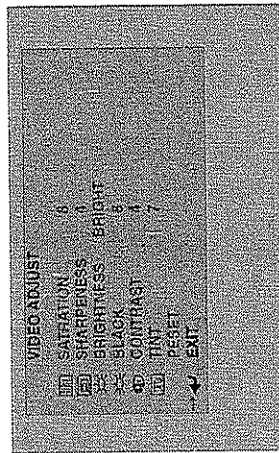

### Audio Setting :

Type: "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.

 1. Press "Up/Down" (▲/▼) button to select "Audio Adjust" option.
2. Press "Save/Enter" button to confirm the selection.
3. Press "Sys Menu" button on the remote control to exit main menu.

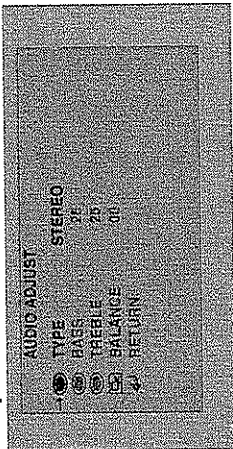


### Attention:

1. Under TV mode, press "Save/Enter" button on the "Audio Adjust" option will highlight the option text in RED color.
2. Press "Left/Right" (◀/▶) button to change the setting to "SAP/STEREO/MONO" sound type, under "Other" mode, the sound typewill be preset to "Stereo".



### Bass:

 1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Audio Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Bass Level" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to adjust the Bass Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

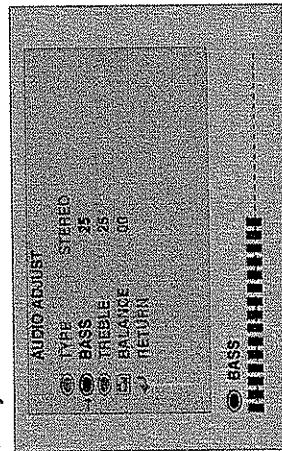



**Treble:**

  1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Audio Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Treble Level" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Treble Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

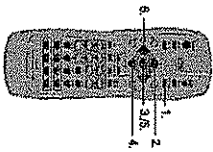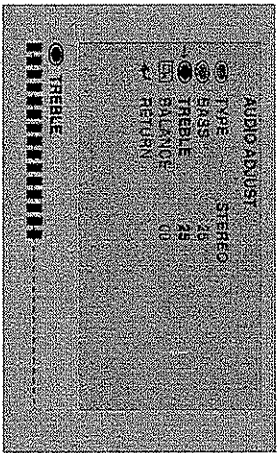



**Balance:**

  1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼)button to select "Audio Adjust" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼)button to select "Balance Level" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶)button to adjust the Balance Level.
7. Press "Sys Menu" button on the remote control to exit main menu.

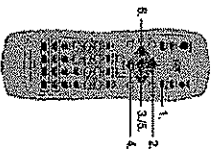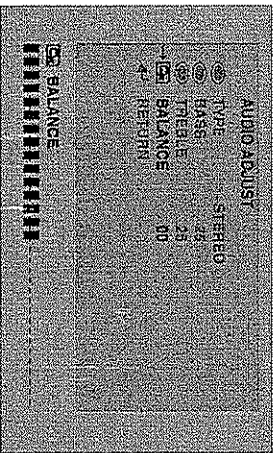




**Return:**

  1. Select the "Return" option under the "Audio Adjust" Menu using the "Up/Down" (▲/▼)button.
2. Press "Save /Enter" button to return to the Main Menu Screen.

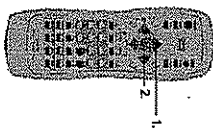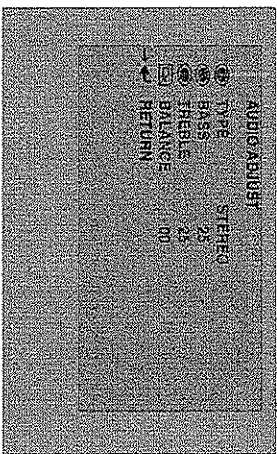

### CLOSED CAPTION Setting:

   1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Closed Caption" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Left/Right" (◀/▶) button, the OSD menu will appear "CC1/CC2/CC3/CC4/T1/T2/T3/T4/OFF".

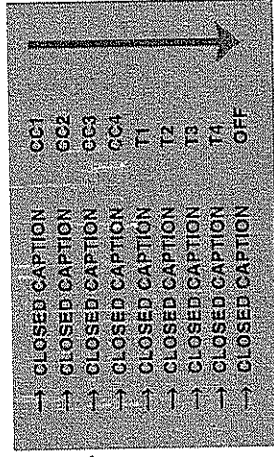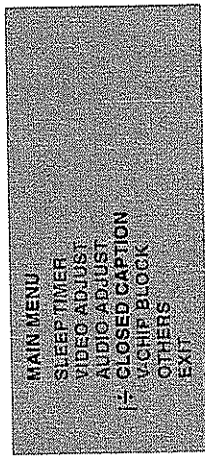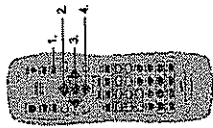


5. Press "Sys Menu" button on the remote control to exit main menu.

**\*\* NOTE: "CLOSED CAPTION" function can only be used on certain system, such "U.S.A" and "CANADA".**
 
### V-CHIP BLOCK Setting:

1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "V-CHIP BLOCK" setting option.
3. Press "Save/Enter" button to confirm the selection.
4. the OSD menu will show as below:


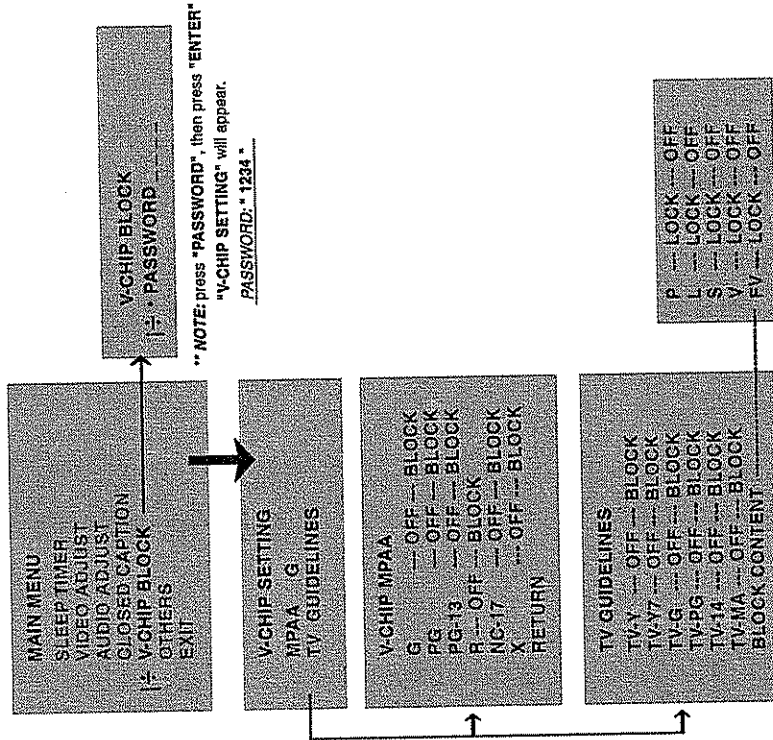


**\*\* NOTE: 1. This unit supports Prevention of Violence and Pornography setting. This function is only applicable to certain disc and system with special settings.  
2. The function can only be used in certain country like USA, Canada etc.**



### Others:

 
 
1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.

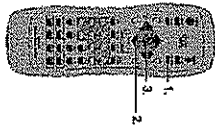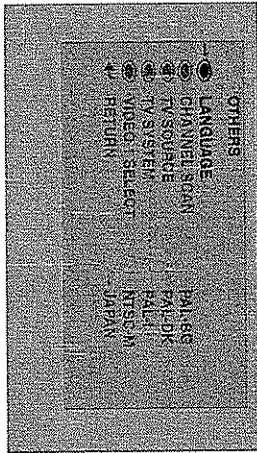

\*\* Default Language Setting is preset to English Language.  
\*\* Only PAL TV TUNER can be selected ---- PAL-BG ; PAL-DK ; PAL-I .

### Channel Scan:

 
 
1. Press "Sys Menu" button on the remote control. Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Channel Scan" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to Scan for channels and stored them to the system memory.
7. Press "Sys Menu" button on the remote control to exit main menu.

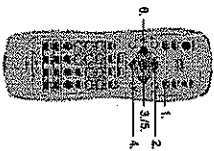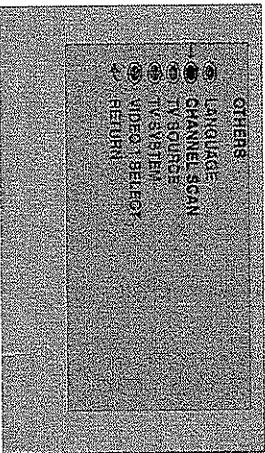

\*\* After scanning is completed, press the "Save/Enter" button to confirm save.



### TV Source Setting:

  1. In TV Mode, press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "TV Source" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to select "Antenna" or "Cable" Option.
7. Press "Sys Menu" button on the remote control to exit main menu.

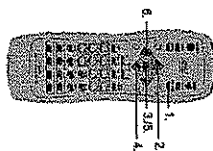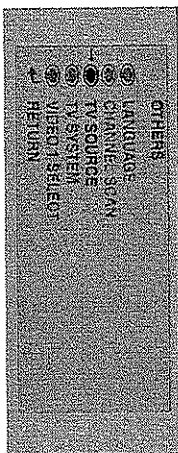

### External Setting:

 
 
1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Video 1 Select" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to select "S-Video" or "Component" option.
7. Press "Sys Menu" button on the remote control to exit main menu.

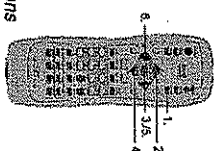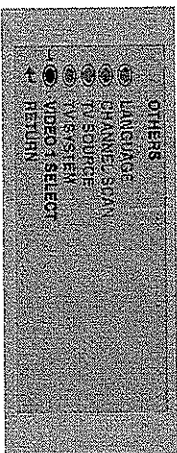

\*\* Please set the option according to the external device specifications

### Return:

  1. Select the "Return" option under the "Audio Adjust" Menu using the "Up/Down" (▲/▼) button.
2. Press "Save/Enter" button to return to the Main Menu Screen.

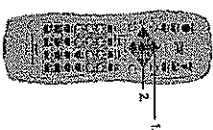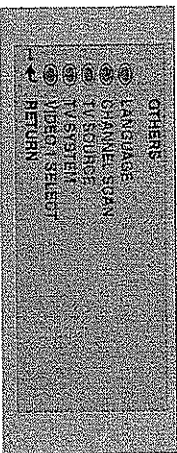

## 7. ANNEX A

### LCD Monitor Care & Cleaning Tips:

To avoid possible shock hazard, be sure the LCD TV is turn off and unplugged from the main electrical outlet before cleaning.

Do not use any form of solvents on the LCD monitor.

### Cleaning the LCD Monitor:

 
1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

### Cleaning the Enclosure:

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

### LCD Angle:

1. Up 20°
2. Down 5°

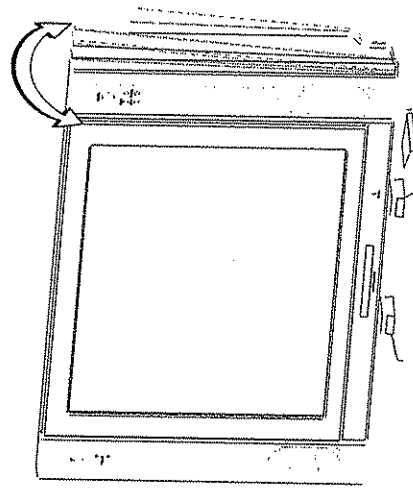

## 8. ANNEX B

### Troubleshooting:

*If the unit fails to operate normally, try solving the problems using the guide below. If the problem persists, switch off the unit and ask the dealer or customer services officer for assistance. Do not attempt to repair the defective unit yourself. Do not endanger yourself as high voltage is involved.*

1. **No Picture**
  - a. Check that the power cord is plugged into the main socket and the power supply is turned on.
  - b. Check the contrast and brightness setting.
  - c. Check the Antenna connection to see if it is properly connected to the LCD TV Input Terminal.
  - d. Be sure you have selected the correct source mode.
2. **Snowish Picture**
  - a. Check to see if the Antenna is correctly connected.
  - b. Check to see if the picture setting is correctly set.
3. **Flickers Picture**
  - a. Check that the power coming from the main socket is sufficient.
  - b. Check that unit is not placed too near speakers or magnetic objects.
  - c. Check to see that the unit setting is correctly set.
4. **Color Patch (Unevenness)**

Be sure you have made connection correctly.
5. **Horizontal Dotted**

Be sure you have made connection correctly.
6. **No Sound**
  - a. Check that mute function is off.
  - b. Increase the volume.
7. **Remote Control not Working.**
8. **Check batteries are installed correctly, replaced if necessary.**
9. **Aim the remote controller towards the unit remote sensor.**

**9. SPECIFICATIONS:**

PRODUCT TYPE	20" 4:3 DIGITAL LCD TV
LCD PANEL	JAPAN SHARP 20" 4:3 LCD PANEL
BRIGHTNESS	450cd/m <sup>2</sup>
RATIO	500:1
BACKLIGHT	50000hrs NORMAL OPERATION
DISPLAY ANGLE	Vertical:170° / Horizontal:170°
AV INPUT/OUTPUT	S-VIDEO/AV INPUT/AV OUTPUT
OSD LANGUAGE	CHINESE/ENGLISH
OPERATING VOLTAGE	AC110-230V 50Hz DC12V 8.5A
IR TRANSMITTER	L:2.3Mhz R:2.8Mhz EFFECTIVE ANGLE:45° EFFECTIVE RANGE:4 METRE
OPERATING VOLTAGE	REMOTE RANGE:5 METRE
TV SPECIFICATION	NTSC ; NTSC-JAPAN PAL-BG ; PAL-I ; PAL-DK
ACCESSORIES(INCL)	1. OPERATING MANUAL 2. REMOTE CONTROL(W/BATTERY) 3. AC CABLE CONVERTOR 4. AC CABLE 5. INSTRUCTION MANUAL 6. S-VIDEO SIGNAL CABLE 7. AV CABLE 8. ANTENNA SIGNAL CABLE