

MAINTENANCE SCHEDULE

Use this list as a guideline for regular inspection and maintenance of your RV.

| | Check before each trip | Monthly | Every 3 Months | Every 6 Months or 3,500 Miles | Yearly or 7,000 Miles | As Required by Manu- facturer |
|---|------------------------------|---------|-------------------|-------------------------------------|--------------------------|-------------------------------------|
| Axle & Springs | X | | | | X | |
| Batteries | X | | | X | | |
| Brakes | X | | | | X | |
| Exterior Lighting | X | | | | X | |
| Fresh Water System | | | | | X | |
| Appliance Service | | | | | | X |
| LP Gas System | | | | | X | |
| Pigtail/Shore Power Cord | X | | | | X | |
| Roof Membrane | | | | X | | |
| Roof Seals | | | | X | | |
| Roof Vents | | | X | X | | |
| Safety Breakaway Switch | X | | | | X | |
| Safety Chains | X | | | | | |
| Sidewall Seals | | | X | X | | |
| Tire Lug Nuts (after first 500 mile check) | X | | | | | |
| Tire Condition, Pressure | X | | | | | |
| Underbelly Tears/Leaks | | | | X | | |
| Wheel Bearings | | | | | X | |
| Window Seals | | X | | X | | |